Attachment G

Technical Specifications for Towers

(120 pages)

Solar Radiation Sensors

Solar energy is a significant element in large-scale atmospheric motion, and as a result it has an important place in meteorology. It is directly related to atmospheric stability, and is used in determining stability classes for pollution studies. Met One Instruments supplies solar sensors to meet virtually any monitoring requirement.

Model 095 Pyranometer

The Model 095 Pyranometer incorporates a multi-junction differential thermopile and a precision ground optical glass hemisphere which is transparent to wave lengths 0.285 to 2.80 microns. It is used for high-precision, broad-band measurements of incident solar radiation.

Features

- Differential thermopile detector
- High accuracy, broad bandwidth
- Temperature compensated
- Rapid response time
- Built-in leveling devices

The detector element is of wirewound-plated construction with black and white segments. When exposed to solar radiation the differing absorptivity of the black and white surfaces develops a temperature differential. The thermopile then produces a voltage proportional to the solar



Model 095

radiation. Built in thermistor circuitry is incorporated to eliminate the effects of ambient temperature.

The single hemispherical optical glass dome has a waterproof seal, but can easily be removed for repairs. The case is cast aluminum, painted white, and is fitted with a desiccator, circular level, and leveling screws. A mounting base with a vertical 3/4" IPS pipe simplifies field installation of the sensor. This rugged instrument is capable of withstanding mechanical vibrations of up to 20 G's.



Met One Instruments, Inc.

Corporate Sales & Service: 1600 Washington Blvd., Grants Pass, OR 97526, Phone (541) 471-7111, Fax (541) 471-71 Distribution & Service: 3206 Main Street, Suite 106, Rowlett, TX 75088, Phone (972) 412-4747, Fax (972) 412-4716 http://www.metone.com

Solar Sensor Specification

	Model 095	Mo ≪ lel 394	Model 096	Model 097
Spectral Response nanometers microns	285 to 2800 0.28 to 2.80	285 to 2800 (clear)* 0.2 to 2.80 (clear)	400 to 1100 0.4 to 1.1	250 to 60000 0.25 to 60
Calibration	Integrating hemisphere approx. 1 cal cm ⁻² min ⁻¹ , at 25°C	Integrating hemisphere approx. 1 cal cm ⁻² min = 1, at 25°C	against Eppley B&W under natural daylight	against transfer standard and compared to a tungsten-halide light source
Sensitivity**	11 mV/kwatt meter ² , approx.	9 m V/kwatt meter-2, app rox.	8.0 mV/kwatt meter-2 with 100 Ohm load, approx.	75 mV/kwatt meter ⁻² , approx
Impedance	350 Ohms, approx.	65O Ohms	100 Ohm load (dependent upon sensor sensitivity)	4 Ohms
Temperature Dependence	±1.5% constancy from -20 to +40° C	±19 constancy from -20° to +40° C	±0.15%/degree C, maximum	N/A
Linearity	±1% from 0 to 1400 watts meter ⁻²	±0. 5% from 0 to 280 • watts meter 2	±1% from 0 to 3000 watts meter-2	N/A
Response time	5 seconds (1/e signal)	1 second (1/e signal)	10 microseconds (10% to 90%)	10.5 seconds
Cosine Response	±2% from normalization 0°-70° zenith angle; ±5% 70°-80° zenith angle	±196 from normalization 0°-70° zenith angle ±396 from 70°-80° zen ith angle	Corrected up to 82° incident angle. Azimuth error less than 1% over 360° at 45° elevation	N/A
Physical Size (including mount)	5.75" dia. x 21" H	5.7 5 " dia. x 23" H	3" dia. x 19" H	2.8" W x 2.5" H x 37" L
Weight (including mount)	4 lbs (1.8 KG)	9 lb 🕿 (4 KG)	1.2 lbs (.54 KG)	3 lbs (1.3 KG)
Mounting	Leveling plate and mounting base included Requires #1552 fitting or similar device	Leveling plate and mounting base included Requires #1552 fitting or similar device	Leveling plate and mounting base included Requires #1552 fitting or similar device	Mounting plate for support arm included
Cable (xx = length in feet)	#1138-xx	#1 1 38-xx	#1832-xx	#2437-xx

Contact factory for other ranges.

MODEL 96-1 SOLAR RADIATION SENSOR OPERATION MANUAL



1600 Washington Blvd. Grants Pass, Oregon 97526 Telephone 541-471-7111 Facsimile 541-471-7116 Regional Sales & Service 3206 Main St., Suite 106 Rowlett, Texas 75088 Telephone 214-412-4747 Facsimile 214-412-4716

		,	

096-1 SOLAR RADIATION SENSOR

1.0 GENERALINFORMATION

- 1.1 The Model 096-1 Solar Radiation Sensor is an accurate and sensitive sensor using a Li-COR sensing element and designed for the continuus measurement of solar radiation. Typically, the sensor is mounted with the 1289 Mounting Plate.
- 1.2 Spectral Response. The relative spectral response of the silicon photodiode does not extend uniformly over the full solar radiation range. A typical response curve is presented in Figure 1.1. The response is very low at 0.4 μm and then increases nearly linear to a cutoff near 1.1 μm. Changes in the spectral distribution of the incident light, coupled with the non-uniform spectral response, can cause errors in the photodiode output. Huli³ shows that in the 0.4 to 0.7 μm range, the spectral distribution of sun plus sky radiation on a horizontal surface is remarkably constant even when clear and overcast days are compared. However, Gates² indicates that the major change in spectral distribution of solar radiation occurs in the near infared where water vapor absorption takes place on cloudy days. Data collected at low solar elevations can show significant error because of altered spectral distribution which changes in atmospheric transmission. This is a small part of the daily total so the possible observed error usually has an insignificant effect on daily integrations.

The area under the spectral irradiance curve of the source is directly porportional to the energy received by a horizontal surface. Under specific but typical conditions, energy received on a completely overcast day has been estimated to be 11.3% of that received on a clear day. When both spectral distributions are weighted according to a typical response curve of a silicon photodiode, the response on this cloudy day is 12.6%. Therefore, errors incurred under different sky conditions, due to the spectral response of the photodiode, will be small. The field tests of Federer and Tanner¹ and Kerr, Thurtell and Tanner⁴ confirm this conclusion.

1.3 Calibration. The 096-1 Pyranometer has been calibrated against an Eppley Precision Spectral Pyramonmeter (PSP) of which the calibration is periodically confirmed. The calibration was performed under daylight conditions by a computer sampling of instantaneous readings from the Eppley and Li-COR pyranometers. Instantaneous readings were taken continuously for 10 minutes and then averaged. Sequential ten minute averaging periods were run from sunup to sundown for 3-4 days. These ten minute averages were then evaluated and used to compute an average calibration constant. The uncertainty of calibration is ± 5%.

Table 1-1 Model 096-1 Solar Radiation Sensor Specifications

Calibration

Calibrated against an Eppley Pyranometer under natural daylight clear conditions.

Absolute accuracy under these conditions is ±5%. All sensors are calibrated to within 1% of each other.

Sensitivity Typically 80 microamp/1000

watts m-2.

Linearity Maximum deviation of 1% to 3000

watts m-2.

Stability Less than 2% change over a 1 year

period.

Response Time (10-90%) 10 mlcroseconds

Temperature Dependence ± .15% per °C maximum

Cosine Correction Cosine corrected up to 82° angle

of incidence.

Azimuth Error Less than 1% over 360° at 45°

eievation.

Sensor Case Weather-proof anodized aluminum

case with diffuser and stainless steel hardware. Precision level supplied.

Mounting A 1289 Mounting Plate is provided.

2.0 INSTALLATION

2.1 096-1 Soiar Radiation Sensor Installation

- A. Typically, the sensor is mounted to the 1289 Mounting Plate. Refer to Figure 2-1. Using a 1552 Mounting Clamp, the radiation sensor and mounting plate may be directly mounted to Met One instruments' Model 191 Mounting Arm, or similar.
- B. For proper operation it is necessary that the sensor be level. Level the sensor using the three outer screws. Lock into place using three inner screws.
- C. The sensor is supplied with an attached 1832 cable. The white or red wire is the + signal. The black wire is the common.

3.0 096-1 SOLAR RADIATION SENSOR CHECK-OUT

3.1 Modei 096-1 Soiar Radiation Sensor has been calibrated at the factory. it will not change unless it is damaged. To check for proper operation of the sensor, expose the sensor to bright sunlight and check datalogger or translator for reasonable output, and then completely cover the sensor with a black tape and check for an output of near zero.

- 3.2 When this sensor is used with a Met One instruments translator, the translator calibration is matched to the individual sensor. If used with dataloggers or other recording devices the use of a terminating resistor is required.
- 3.3 Terminating Resistor
 - A. The resistor is used to convert the current output signal to a voltage output signal, and is required when the sensor is connected to millivoit recording devices.
 - B. A precision 100Ω or 150Ω resistor has been supplied with the sensor to allow for the correct interface between the sensor and millivoit recording electronics (not required when the 096-1 is used with the Met One Instruments Translator circuit cards). Place this resistor in parallel with the signal leads from the sensor. The output signal is then equal to:

Mv = i * R
Where:
Mv = Output microvoits
I = Output signal in microamps
R = Resistance In ohms of terminating resistor

- 4.0 MAINTENANCE AND TROUBLESHOOTING
- 4.1 General Maintenance Schedule*
 - A inspect sensor for proper operation as per Section 3.0.
 - B. Clean sensor element monthly using clean rag or tissue.
 - *Schedule is based on average to adverse environments.

REFERENCES

- 1. Federer, C.A., and C.B. Tanner,1965. A simple integrating pyranometer for measuring daily solar radiation. J. Geophys, Res. 70, 2301-2306.
- 2. Gates, D.M., 1965. Radiant energy, its receipt and disposal. Meteor. Monogr., 6, No. 28, 1-26.
- 3. Hull, J.N., 1954. Spectral distribution of radiation from sun and sky. Trans. Illun. Eng. Soc. (London), 19:21-28.
- 4. Kerr, J.P.,G.W Thurtell, and C.B. Tanner,1967. An integrating pyranometer for climatological observer stations and mescoscale networks. Journal of Applied Meteorology,6,688-0694.




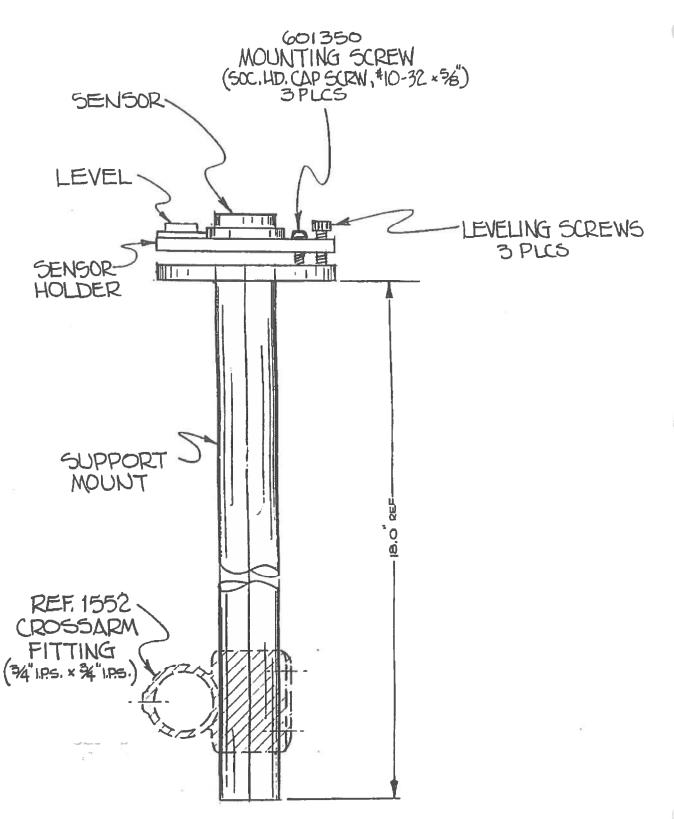



FIGURE 2-1 096-1 WITH 1289 SUPPORT MOUNT

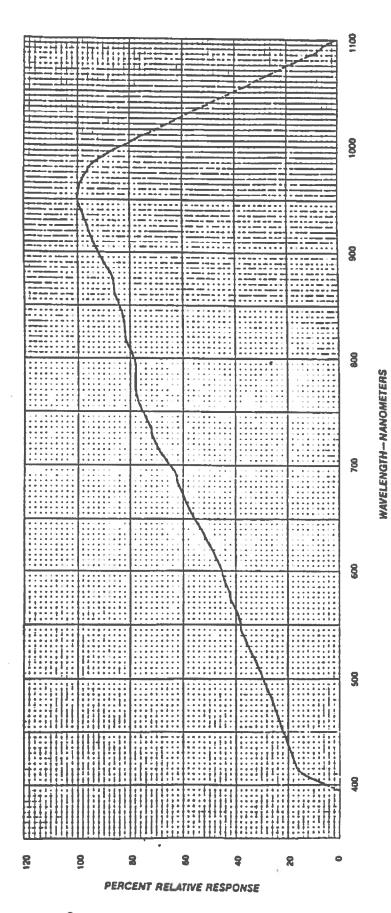

FIGURE

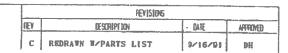

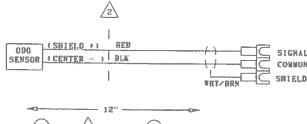

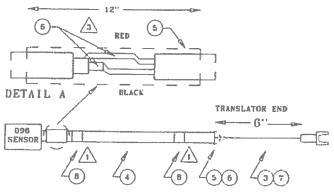

ITEN	PART NO.	DESCRIPTION	QT1
1			
2		***	
3	600193	LUG. SPADE. #6	3
4	400010	CABLE, 2 WIRE, SHIELDED	A/R
5	900050	SLEEVING. 1/4". SERINK	12"
6	960075	SLEEVING. 1/8". SHRINK	AR
7	980510	VIRE. 22 AVG. VHT/BRN	6
8	960060	SLEEVING, 1/4", CLEAR SERINK	A/R
9			
10			

DASH NUMBER : LENGTH IN FEET.

SPLICE 1832 CABLE TO 096 SENSOR CABLE AS SHOWN IN DETAIL A.

2 cover each wire splice separately.

	ME	то	NE	INS	TRUM	EN'	TS	
	AS S(SY,	C/R	ABLE	20 , E	96 N		
\$1Æ	FSD4 ND,		DVG H	0	183	2	-	REY Ĉ
STALE			•		SEEL	1	OF	

Wind Speed Sensor

014A

The Model 014A Wind Speed Sensor is an accurate, durable, and economical anemometer suitable for a wide range of wind study applications. It is designed for long term unattended operation in most meteorological environments.

Features

- □ Range to 100 mph
- Low starting threshold
- Broad temperature operating range
- Accuracy of ±1.5%
- Stainless steel and aluminum construction


Operation

For maximum operational reliability, the sensor uses a sealed magnetic read switch. This switch produces a series of contact closures at a rate proportional to wind speed. With its pulsed output, the Model 014A lends itself to applications involving both digital and analog measurement systems.

The pulsed signal may be converted to standardized analog voltage and/or current output by use of translator electronics. Direct connection to a datalogger is also possible. The robust aluminum cup assembly normally supplied has a distance constant of <15 feet. For greater sensitivity, the optional Lexan plastic cup assembly may be specified, which has a distance constant of <5 feet.

Construction

The construction of the sensor reflects the requirement for reliability and durability. Only the

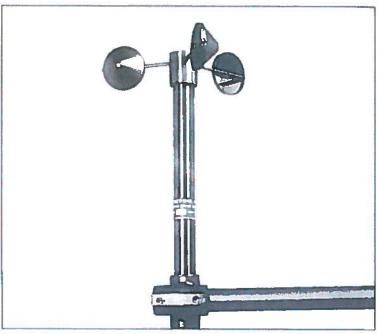

Accuracy, reliability and economy make the Model 014A Wind Speed Sensor an ideal choice for most applications.

best corrosion resistant materials, such as stainless steels and anodized aluminum are used. The Model 014A sensor uses a

quick-connect sensor cable. Cable length may extend hundreds of feet without affecting measurement performance.

Specifications

Range 0-100 mph
Starting threshold 1 mph
Accuracy ±.25 mph or 1.5% FS
Distance Constant
Standard <15 feet (Metal Cup Assy)

Fast Response <5 feet (Lexan Cup Assy)

Operating Range -50° C to +70° C

Contact Rating 11 ounces

Weight 11 ounces

Model 191 Cross Arm

 
Ordering Information

Standard Model Fast Response Model Cable 014A (Metal Cup) 014A-1 (Lexan Cup) #1805-xx (xx = length in feet)



Met One Instruments, Inc

Corporate Sales & Service: 1600 Washington Blvd., Grants Pass, OR 97526, Phone (541) 471-7111, Fax (541) 471-7116 Distribution & Service: 3206 Main Street, Suite 106, Rowlett, TX 75088, Phone (972) 412-4747, Fax (972) 412-4716 http://www.metone.com



MODEL 014A WIND SPEED SENSOR

OPERATION MANUAL Document No. 014A-9800



1600 Washington Blvd. Grants Pass, Oregon 97526 Telephone 541-471-7111 Facsimile 541-471-7116

Regional Sales & Service 3206 Main St., Suite 106 Rowlett, Texas 75088 Telephone 972-412-4715 Facsimile 972-412-4716

014A WIND SPEED SENSOR

1.0 GENERAL INFORMATION

- 1.1 The Met One 014A Wind Speed Sensor uses a durable 3-cup anemometer assembly and simple magnet-reed switch assembly to produce a series of contact closures whose frequency is proportional to wind speed. This sensor is usually used in conjunction with the 191 Crossarm Assembly and a translator module, but may also be used directly with a variety of dataloggers.
- 1.2 Sensor Cable has a quick-connect connector with vinyl-jacketed, shielded cable. Cable length is given in -XX feet on each cable part number.

Table 1 - 1 Model 014A Wind Speed Sensor Specifications

Performance Characteristics

Maximum Operating Range

Starting Speed Calibrated Range

Accuracy

Temperature Range

Distance Constant*

Standard (1812 Aluminum Cup Assembly)

Optional (1708 Lexan Cup

Assembly)

0-60 meters/sec or 0-125 mph

.5 meters/sec or 1 mph 0-50 meters/sec or 0-100

±1.5% or 0.25 mph

-50° C to 85° C

Less than 15 feet

ress man 13 leaf

Less than 5 feet

Electrical Characteristics

Output Signal

Contact closure at frequency V= (f x 1.7892) + 1 mph

Physical Characteristics

Weight

Finish

Mounting Fixtures

Cabling

1.5 lbs.

Anodized

Use with 191 Crossarm

2-Conductor Cable, XX is cable length

in feet

Optional Accessories

(a)1708 Lexan Cup Assembly, Fast Response Type

^{*}The distance traveled by the air after a sharp-edged gust has occurred for the anemometer rate to reach 63% of the new speed.

2.0 INSTALLATION

2.1 014A Wind Speed Sensor Installation

- A Check to see that the cup assembly rotates freely (threshold, bearing check).
- B. Install the sensor into the fitting on the end of the 191 mounting arm. (THE END WITHOUT THE ALIGNMENT BUSHING) Install just deep enough to allow cable connection. (Reference the mounting detail in Figure 2-1).
- C. Apply a small amount of silicone grease to the set screws to prevent 'freezing up' in corrosive environments. Tighten the locking set screws--do not over tighten.
- D. Connect the Cable Assembly to the connector receptacle on base of sensor. Secure the cable to the mounting arm using cable ties or tape.

2.2 Wiring

The Cable Assembly contains three wires.

Black

Signal

Red

Common

White/Brn :

Cable Shield

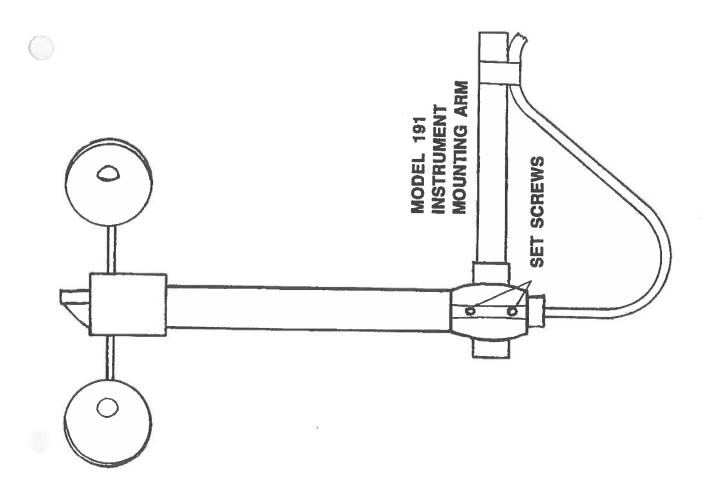


TABLE 3-1

MODEL 014A WIND SPEED SENSOR CALIBRATION

WIND VELOCITY VS OUTPUT FREQUENCY Speed in Miles/Hr				RP	M VS WIND SP	EED
Speed V mph	IN MILLES	verr Fhz				
10	2.515	5.030	RPM	MPS	MPH	Fhz
20	5.310	10.619	100 200	3.113	6.964	3.333
30	8.104	16.208	*300	5.779	12.928	6.667
40	10.899	21.797	400	8.446	18.892	10.000
50	13.693	27.386	500	11.112 13.778	24.856	13.333
60	16.488	32.975	*600		30.820	16.667
70	19.282	38.564	700	16.444 19.110	36.785	20.000
80	22.077	44.153	800	21.777	42.749	23.333
90	24.871	49.742	900	24.443	48.713 54.670	26.667
100	27.666	55.331	1000	27.109		30.000
110	30.460	60.920	1100		60.641	33.333
120	33.255	66.509	1200	29.775 32.441	66.605	36.667
120	00.200	00.309	1300	35.108	72.569	40.000
SPEED	IN METE	Beiger	1400	37.774	78.533	43.333
V mps	RPS	F hz	1500	40.440	84.497	46.667
2.5	1.284	2.567	1600	43.106	90.461	50.000
5	2.846	5.693	1700	43.106 45.772	96.426	53.333
7.5	4.409	8.819	*1800	48.438	102.390 108.354	56.667
10	5.972	11.945	1000	40.436	100.354	60.000
12.5	7.535	15.071	* STAND		ATOR TEST POIN	ITC
15	9.098	18.197	STAND	AND CALIDA	ATOR TEST POIN	115
17.5	10.661	21.323		V mph =	<u>RPM</u> +1	
20	12.224	24.449			16.767	
22.5	13.787	27.575			10.707	
25	15.350	30.701				
27.5	16.913	33.827		V mps =	RPM + .44704	L
30	18.476	36.953		•	7.5067	•
32.5	20.039	40.079		J	7.0007	
35	21.602	43.205		Basad on a	equation f= .5589 (V-1	11
37.5	23.165	46.331			the output frequency.	''
40	24.728	49.457			seed miles per hour.	
42.5	26.291	52.583			revolution per second.	
45	27.854	55.709		•	0.44707 meters/sec	
47.5	29.417	58.835				
50	30.980	61.961				
52.5	32.543	65.087				
55	34.106	68.212				
57.5	35.669	71.338				
60	37.232	74.464				

3.0 OPERATIONAL CHECK-OUT AND CALIBRATION

3.1 014A Wind Speed Sensor Check-Out

- A. Spinning the anemometer cup assembly will produce a series of pulses.

 To verify sensor output, monitor this signal with either a plug-in Translator Module, Datalogger or an Ohmmeter. Refer to Frequency vs. Wind Speed Table 3-1. Spin slowly and monitor output signal. A windspeed calibrator may be used to check operation at different RPM points.
- B. Inspect the cup assembly for loose cup arms or other damage. The cup assembly cannot change calibration unless a mechanical part has come loose or has been broken.

4.0 MAINTENANCE AND TROUBLESHOOTING

4.1 General Maintenance Schedule*

6-12 month intervals:

- A Inspect sensor for proper operation per Section 3.0.
- B. Replace Wind Speed Sensor bearings in extremely adverse environments per Section 4.6.

12-24 month intervals:

A. Replacement of sensor bearings.

24-36 month intervals;

Recommended complete factory overhaul of sensor.

Table 4-1

TROUBLESHOOTING TABLE

Symptom	Probable Cause	Remedy
No sensor output	Faulty reed switch	Replace reed switch
No sensor ouput	Faulty bearings	Replace bearings
No sensor outut	Faulty cable	Check Connections

^{*}Schedule is based on average to adverse environments.

- 4.3 014A Wind Speed Sensor: 6-12 Month Periodic Service
 - A. At the crossarm assembly, disconnect the Sensor Cable from the Sensor (leave the cable secured to the crossarm) and remove the Sensor from the fitting on the crossarm assembly.
 - B. Loosen the two set screws on the side of the hub and remove the anemometer cup assembly.
 - C. Visually inspect the anemometer cups for cracks and breaks and make sure that each is securely attached to the cup assembly hub.
 - D. Inspect the Sensor for any signs of corrosion and dust buildup.
 - E. Rotate the Sensor hub assembly to make sure that it turns freely and that the Sensor bearings are not damaged. Make sure that the magnet assembly is not contacting the reed switch. (Ref. Fig. 4.1).
 - F. A moisture drain vent is located on the base of the Sensor. Make sure that this vent is clear.
 - G Re-install Sensor as per installation procedure (Section 2.0) and verify proper operation using procedures in Section 3.0.
- 4.4 014A Wind Speed Sensor General Assembly (refer to 014A Assembly Drawing)

The following steps cover basic disassembly:


- A. At the crossarm assembly, disconnect the Sensor Cable from the Sensor (leave the cable secured to the crossarm) and remove the Sensor from the crossarm assembly.
- B. Loosen the two set screws and remove the anemometer cup assembly.
- C. Remove the three (3) flathead screws at the top of the Sensor and lift out the bearing mount assembly, taking care not to break the wires.
- 4.5 Reed Switch Replacement Procedure

Use the following procedure to replace Sensor Reed Switch:

- A Remove bearing mount assembly as per Section 4.4.
- B. Unsolder the leads of the Reed Switch (10) and remove the switch from the two mounting terminals (13).
- C. Solder the new switch onto the sides on the switch mount terminals, taking care not to stress the point where the leads enter the glass reed switch body. (Solder quickly to reduce excess heat to reed switch.) Measure the distance between the bottom of the rotating magnet and the top of the switch envelope, as shown in Figure 4 -1. The spacing should measure between .010 and .020 inch.

- D. Monitor the output of the translator module and spin shaft for an upscale indication. If switch seems to falter, adjust switch slightly closer to magnet.
- E. If possible, connect the shaft to an 1800 RPM motor, using a flexible coupling and verify an output of 108 mph with a 50% duty cycle.
- F. Reassemble Sensor by reversing procedure.

FIGURE 4-1: REED SWITCH INSTALLATION

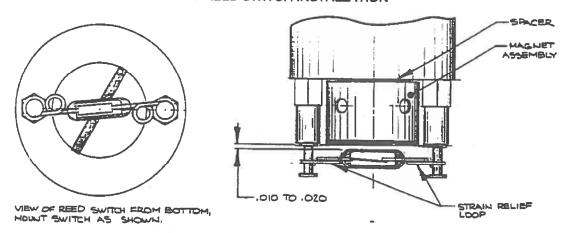

4.6 Bearing Replacement Procedures

The bearings used in 014A Sensor are special stainless steel ball bearings with a protective shield. Bearings are lubricated and sealed. Do not lubricate bearings as the lubrication will attract dust and will form an oil/dust glue. Use the following procedure for bearing replacement:

- A Remove bearing mount assembly as per Section 4.4.
- B. Loosen set screws(21) in magnet assembly (4), lift shaft (7) and collar (3) up and out of bearing mount (2). Be sure to retain lower spacer (19)
- C. Insert a right-angle type of tool, such as an allen wrench into bearing, cock it slightly to one side and remove bearing. Remove both bearings. Clean bearing seats.
- D. Install new bearings. Be careful not to introduce dirt particles into bearings. CLEAN HANDS ONLY! DO NOT ADD LUBRICATION OF ANY KIND.
- E. Reassemble the Sensor in reverse order. Be sure to include spacers (19) over the bearings when replacing the shaft in the bearing mount. After the magnet assembly (4) has been tightened, a barely perceptible amount of endplay should be felt when the shaft is moved up and down (approximately .004 inch).

4.7 014A Wind Speed Sensor Repair and Recalibration Service

This service provided by the factory enables fast, economical service for the user. This repair and calibration service includes disassembly and detailed electronic components. Service includes replacement of bearings regardless of apparent condition. Service also includes replacement of the following items.

A. Shaft


B. All set screws.

Service also includes functional test of Sensor. Other components will be replaced as required. Additional charges for additional materials only will be added to the basic service charge.

Table 4 - 2
REPLACEABLE PARTS LIST


ITEM #	PART #	DESCRIPTION
1	101685-2	WS SUPPORT
2	101685-4	BEARING MOUNT
3 *	101685-7	COLLAR
4 *	101715	MAGNETASSY
5	101812	CUP ASSEMBLY (ALUM)
6 *	101898	BEARING
7 *	860001	SHAFT
9	101812-1	CUP ASSEMBLY, LEXAN
10*	2844	SWITCH REED
12	510020	CAP FOR CONNECTOR
13*	970062	TERMINAL HH SMITH
19*	860250	SPACER
21*	601250	SET SCREW 4-40X 1/8
22	601230	FLAT HD. 4-40X 1/4 SCREW

^{*} Parts included in 2402 Rebuild Kit

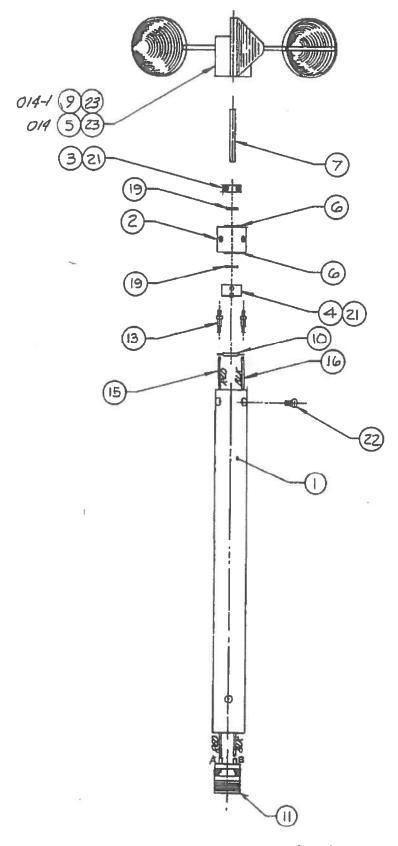


MODEL 014A (-1) EXPLODED VIEW


1805 SENSOR CABLE - TERMINATES IN SPADE LUGS

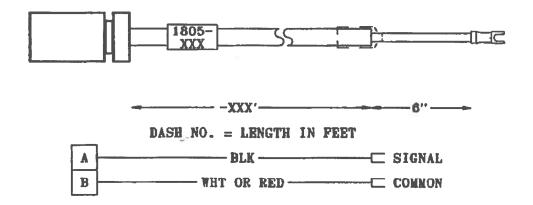



1808 SENSOR CABLE - USE WITH 110 WEATHERPROOF TRANSLATOR

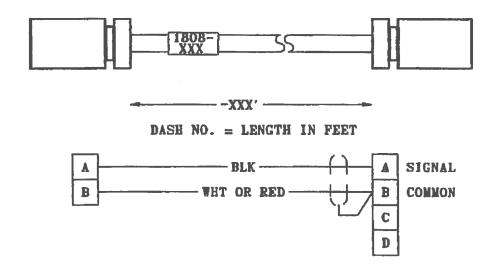

2026 CABLE - USE WITH MET-SET 4B AND 4C

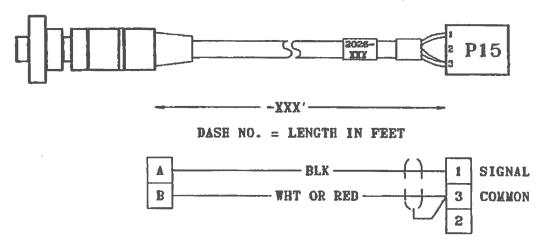


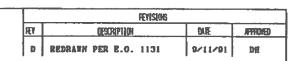

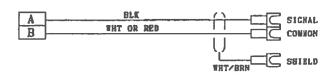

SENSOR END

TRANSLATOR END

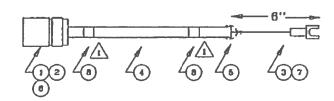



SOLDER CUP VIEW

Λ	1DENTIFY DASH NUM	CABLE	18"	PROM	RACH	BHD
/1\	DASH NUM	BER = 1	ENCT	B IN	FRET.	

ITBY	PART NO.	DESCRIPTION	QTY
ı	500372	COMMECTOR, E PIN , MS3106A-14S-2S	1
2	4805CD	CLAMP	1
3	600193	LUG, SPADE, #6	3
4	400010	CABLE, 2 VIRE, SHIELDED	A/R
5	960050	SLEEVING. 1/4". SBRINK	A/R
0	960075	SLEEVING, 1/8". SERINE	A/R
7	980510	VIRE, 22 AVG. VHT/BRN	0"
8	960060	SLEEVING, 1/4". CLEAR SHEINK	A/H
9			
10			T-

ME	T ONE INSTRUMENTS	
	CABLE, 014 WIND SPEED SENSOR	
SIÆ FSON NO.	^{DAG MO.} 1805	RY D
SCALE	SHEI I OF	

Precipitation Gauges

The accurate measurement of rain and snow precipitation remains one of the most basic elements of meteorology. To enable accurate measurement of precipitation in all environments, Met One Instruments provides a series of instruments incorporating a tipping bucket mechanism. The tipping bucket design allows accurate, repeatable measurements, requires no regular operator maintenance, and is economical and proven in operation.

Features


- Jeweled bearings
- Teflon coated bucket
- Reed switch
- Self emptying
- Corrosion resistant materials
- Quality construction

Each model in the series is optimized to meet a particular site and sampling requirement.

Operation

A dual-chambered tipping bucket assembly is located below the collection funnel. When a precise amount of precipitation has been collected in one side of the bucket, gravity tips the assembly and activates a reed switch. A momentary electrical contact closure through the switch is provided for each increment of rainfall. The sample is discharged through the base of the gauge.

For environments that can typically expect a significant amount of frozen precipitation, internal sensor heaters are available. The heating elements are ther-

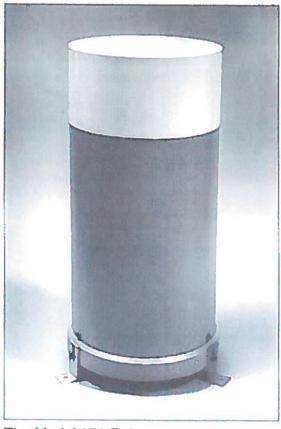


The Model 370 Raingauge

mostatically controlled to melt and measure the water content of snow and frozen rain, but to avoid evaporative loss.

Construction

The heavy machined aluminum base provides a stable platform for the tipping assembly. The bucket is made from stainless steel and is Teflon coated to prevent retention of the sample. The bucket pivots are precision machined and fitted with jeweled bearings to reduce

wear and friction. The funnel is powder coated aluminum and has two screens for preventing leaves and other debris from entering or clogging the gauge. A circular bubble-level and adjustable feet facilitate proper mounting of the unit. Major components are finished in catalyzed polyurethane paint, with a color and texture chosen to allow the sensor to blend into the environment.

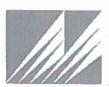

Met One Instruments, Inc.

Corporate Sales & Service: 1600 Washington Blvd., Grants Pass, OR 97526, Phone (541) 471-7111, Fax (541) 471-7116 Distribution & Service: 3206 Main Street, Suite 106, Rowlett, TX 75088, Phone (972) 412-4747, Fax (972) 412-4716 http://www.metone.com

Specifications

Rain Gauges									
Model No.	Funnel Dia.	Standard Calib.	Optional Calib.						
370 372	8" 8'	0.01 ^s 0.5 mm	0.2 mm or 0.25 mm N/A						
380 382	12° 12'	0.01° 0.1 mm	0.2 mr N/A	n or 0.25 mm					
Rain & Snow Gauges									
Model No.	Funnel Dia.	Standard Calib.	Optional Calib.		Heater Voltage				
375 376 377 379	8° 8° 8°	0.01° 0.01° 0.5 mm 0.5 mm	0.2 mm or 0.25 mm 0.2 mm or 0.25 mm N/A N/A		115 VAC 220 VAC 115 VAC 220 VAC				
385 386 387 389	12" 12" 12" 12"	0.01° 0.01° 0.1 mm 0.1 mm	0.2 mm or 0.25 mm 0.2 mm or 0.25 mm N/A N/A		115 VAC 220 VAC 115 VAC 220 VAC				
Accuracy	at 0.5*/hour at 1" to 3*/hour	±0.5% ±1.0%							
Switch	Type Rating	Reed 10 mA, 28 VDC							
Height	8' Gauges 12' Gauges	18" (46 cm) 20.5" (52 cm)							
Weight (not including cabling)		8° Rain Gauges 12° Rain Gauges 8° Rain & Snow Gauges 12° Rain & Snow Gauges		6 lbs. (2.7 kg) 7.5 lbs. (3.4 kg) 6.5 lbs. (3 kg) 11.5 lbs. (5.2 kg)					
Shipping Weight (not including cabling)		8" Rain Gauges 12" Rain Gauges 8" Rain & Snow Gauges 12" Rain & Snow Gauges		8.5 lbs. (3.9 kg) 10 lbs. (4.5 kg) 9 lbs. (4 kg) 14 lbs. (6.4 kg					
Finish	White Gloss/Biege textured powder coat and clear anodized aluminum								
Cable	Signal Power (as req'd)	#1566-xx #2517-xx							

Ordering Information

Specify Model number, calibration factor, cable length(s), and accessories.

(xx = length in feet)

Accessories and Related Products

Model 820440 Wind Screen. The improved Alter-design screen is constructed of 32 free-swinging, separated leaves. It can greatly improve the accuracy of the precipitation catch by reducing local turbulence.

Model 550500 Evaporation Gauge. This device measures the water level in a standard evaporation pan, and provides an output proportional to that level.

Please contact Met One Instruments for additional information on these products.

Specifications subject to change.

MODEL 375C 8" RAIN GAUGE

OPERATION MANUAL Document No. 375-9801



1600 Washington Blvd. Grants Pass, Oregon 97526 Telephone 503-471-7111 Facsimile 503-471-7116

Regional Sales & Service 3206 Main St., Suite 106 Rowlett, Texas 75088 Telephone 214-412-4747 Facsimile 214-412-4716

MODEL 375C ELECTRIC RAIN/SNOW SENSOR OPERATION MANUAL

1.0 GENERAL INFORMATION

- 1.1 Model 375C Electric Heated Tipping Bucket Rain/Snow Gauge is an accurate, sensitive and low-maintenance sensor designed to measure rainfall on a continuous basis. Water does not collect in the sensor, but is drained each time an internal bucket fills with 0.01 inch of rainfall (standard calibration). At this time, a switch closure pulse is also sent to the translator module for counting. The sensor is calibrated prior to shipment and requires no adjustments after mounting.
- 1.2 Sensor Cable is a vinyl-jacketed 2-conductor shielded cable connecting to the sensor via an internal terminal strip. Cable length is designated in -xx feet on each cable part number label.
- 1.3 Power Cable is a vinyl-jacketed 3-conductor shielded cable connecting to the sensor heaters with wire nuts in an externally mounted J-Box. Cable length is designated in -xx feet on each cable part number label.

<u>Table 1-1</u> <u>Model 375C Rainfall Sensor Specifications</u>

Orifice 8" Diameter

Calibration (standard) .01" Rain per switch closure

Calibration (options) 0.2mm, 0.25mm

Accuracy ±1% at 1" to 3" per hour at 70° F

Switch Type Magnet & Reed

Mounting 3 Pads for 1/4 bolts on 9-21/32" (9.66")

circle diameter

Dimensions 17-3/4" high, 8" diameter not including

mounting pads

Power Requirement 110VAC, 50/60 Hz, 315W

Weight, less cables 7.5 lbs/3.4 kg (10 lbs shipping w/cables)

2.0 INSTALLATION

- 2.1 Choose a site where the height of any nearby trees or other objects above the sensor is no more than about twice their distance from the sensor. (Sample: 50 ft tree at least 100' away from gauge). A uniform surrounding of objects (such as an orchard) is beneficial as a wind break. Nonuniform surroundings (such as a nearby building) creates turbulence which affects accuracy.
- 2.2 Mount the sensor <u>level</u> on a platform, using the built in level as an aid. The three legs can be adjusted for leveling. Three 1/4" diameter bolts are used to mount the sensor on a 9-21/32" (9.66") bolt circle.
- 2.3 Remove shipping restraint (This may be tape, rubber band, or similar item) from sensor bucket and verify that bucket moves freely and that all adjusting screws are tight.
- 2.4 Connect the signal cable lugs to the terminal strip if not connected already. See diagram. Polarity is not important. See FIGURE 2-1.
- 2.5 Connect the power cable to the leads inside the condulet (see FIGURE 2-2) if not connected already.
- 2.6 Replace cover on sensor, tightening screws at base.
 - NOTE: If snowfall is anticipated, remove primary screen from funnel.
- 2.7 Route signal cable to the translator or datalogger and connect. Refer to the System Interconnect Diagram in your system manual for terminal identification.
- 2.8 Route the power cable to a 110VAC power source protected with a 15A GFI circuit.

 Connect (Ref. FIGURE 2-2). This wiring must conform to local and state wiring codes.

 If you are not familiar with these codes, an electrical contractor should be used.

Warning:

As with any AC power wiring, improper safety procedures can cause fatal injuries. If you are not qualified to do this work, call an electrical contractor to do it for you.


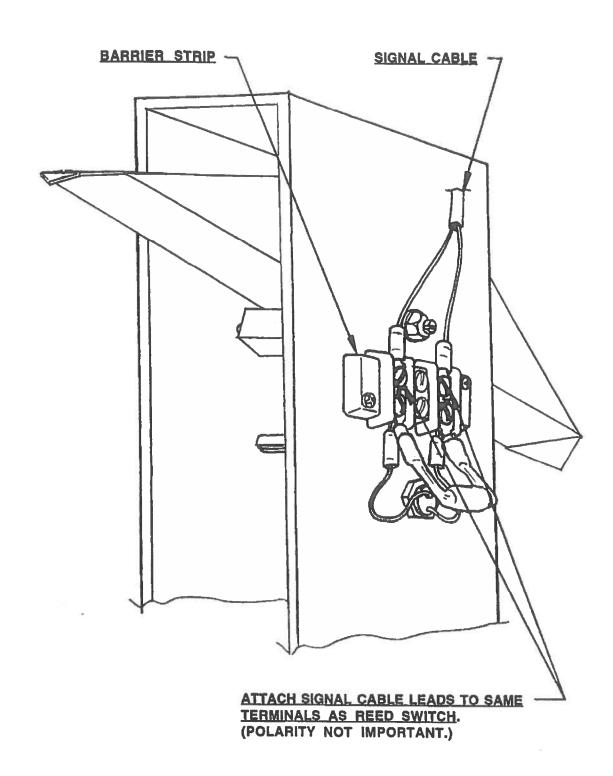


FIGURE 2-1

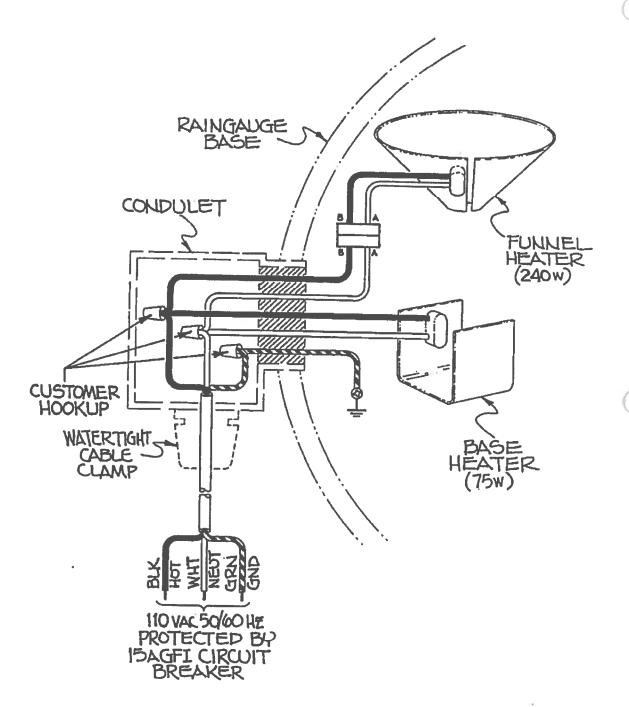

HEATER POWER HOOKUP

FIG. 2-2

375C 8/94

Page 4

3.0 OPERATIONAL CHECK-OUT

3.1 Manually actuate tip bucket mechanism (stop-to-stop) three (3) times. Confirm that 3 tips have registered on the recording equipment. If not, refer to Troubleshooting Guide, Section 4-3.

4.0 MAINTENANCE AND TROUBLESHOOTING

4.1 General Maintenance Schedule*:

At six month intervals, perform the following steps:

- a. Clean sensor funnel and buckets.
- b. Do NOT lubricate the pivots, as any lubricant may attract dust and dirt and cause wear of the jewel bearings.
- c. Verify that buckets move freely and that translator card or datalogger registers 0.01° or as calibrated for each bucket tip.

*Based on average to adverse environments.


- 4.2 <u>Calibration</u>. The sensor is factory calibrated; recalibration is not required unless damage has occurred or the adjustment screws have loosened. To check or recalibrate, perform the following steps:
 - a. Check to be sure the sensor is level.
 - b. Wet the mechanism and tipping bucket assembly. Using a graduated cylinder, slowly pour the measured quantity of water through the inner funnel to the tipping bucket, which should then tip. Repeat for the alternate bucket. If both buckets tip when filled with the measured quantity of water, the sensor is properly calibrated. If they do not, recalibrate as follows:
 - 1. Release the lock nuts on the cup adjustments.
 - 2. Move the adjustment screws down to a position that would place the bucket far out of calibration.
 - 3. Allow the measured quantity of water to enter the bucket. (Refer to Table 4.1)
 - 4. Turn the cup adjustment screw up until the bucket assembly tips. Tighten the lock nut.
 - 5. Repeat steps 3 and 4 for the opposite bucket.
 - 6. Measure the quantity of water necessary to tip each bucket several times to ensure proper calibration.
 - 7. Replace the cover on the gauge.


Table 4.1 Calibration Quantities

Tip Calibration	Water Quantity
0.01° (standard)	8.24 milliliters
0.2mm	6.49 milliliters
0.25mm	8.11 milliliters

4.3 TROUBLESHOOTING

SYMPTOM	PROBABLE CAUSE	REMEDY
No sensor output	Faulty Reed Switch	Replace Reed Switch
	Signal Cable Connection	Check Connections
	Lightning Strike	Replace Reed Switch & Diode
	Debris in Funnel	Clean (See 4.1)
Erroneous Reading	Sensor not level	Re-level
	Sensor out of Calibration	Recalibrate (see 4.2)
	Site too near trees or other objects	Relocate (See 2.1)
Snow Not Melting	Heaters not getting power	Check circuit protector (customer provided)
	Heater Failure	Return unit to factory for repair.
	Primary Screen Installed	Remove Screen

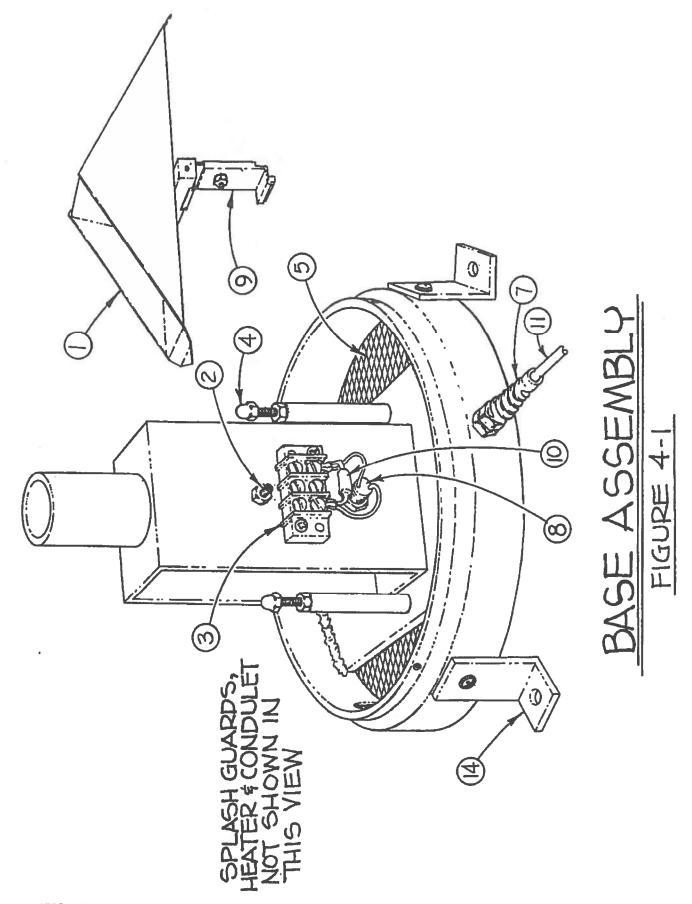

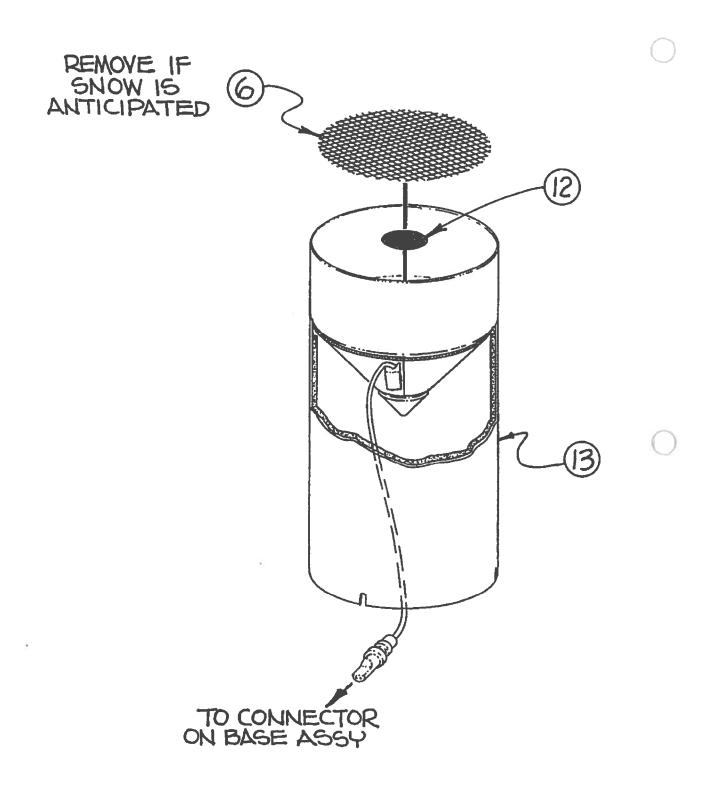


HOUSING/FUNNEL ASSEMBLY

375C 8/94

FIGURE 4-3

Page 8

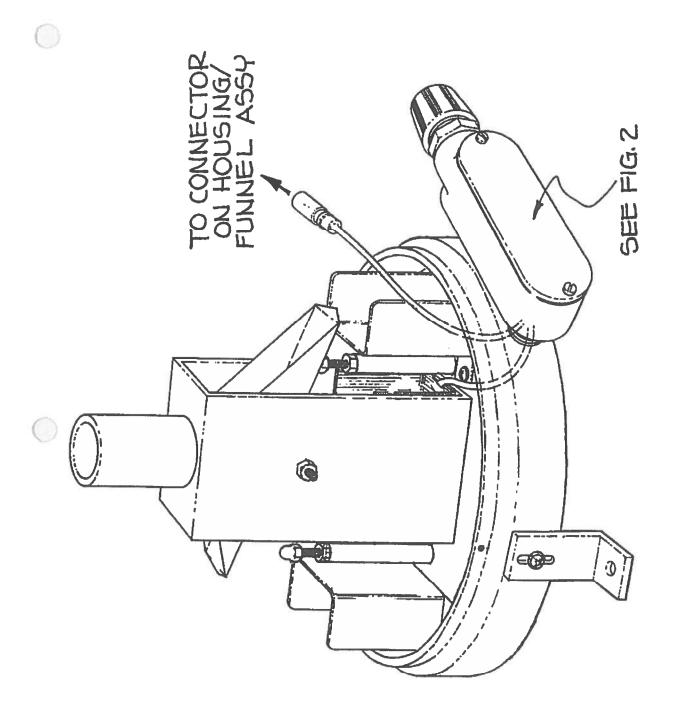

BASE ASSEMBLY (SHOWING HEATER COMPONENTS)


4.4 REPLACEABLE PARTS LIST

Model 375C Rain Gauge Parts List


I.D. No.	Part No.	Description
1	2545	Assembly, Tip Bucket (.01", .2mm, .25mm)
2	2492	Pin, Pivot
3	340070	Barrier, Strip - 3 pos.
4	480210	Nut, Crown, Nylon #8-32
5	2598	Screen, Base
6	2503	Screen, Primary Top
7	480510	Clamp, Liquid-Tight
8	2934	Reed Switch Cartridge
9	2936	Adjustable Magnet Bracket
10	2937	Lightning Protection Diode
11	1566	Standard Cable Assembly
11	2745	Cable Assembly (for use with Automet)
12	2504	Screen, Secondary
13	2666	Assembly, Housing/Funnel 8" (115VAC)
14	2516	Foot


4.5 REPAIR AND RECALIBRATION SERVICE


This service provided by Met One Instruments enables fast, economical service for the user. This repair and calibration service includes disassembly, inspection, cleaning, reassembly and calibration. Components will be replaced as required. Additional charges for additional materials only will be added to the basic service charge.

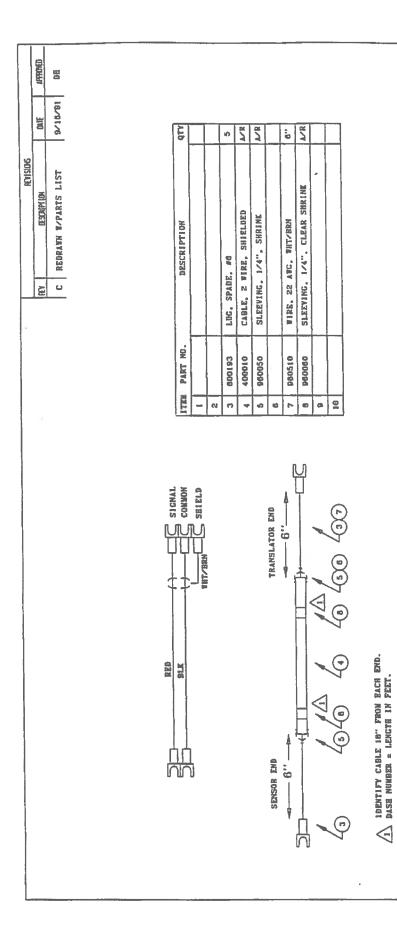

	MET	ONE IN	ONE INSTRUMENTS	
Y	ASSY,	CABLE,	RAIN CAUCE	
2	SIÆ PSDI 10.	000 HO.	9	KU K
SOFE			36E) 1 OF 1	

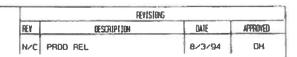

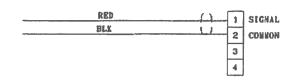

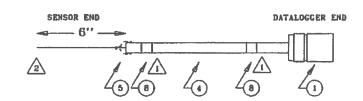

DASH NUMBER = LENGTH IN PERT.
STANDARD LENGTH = 50 PT

STRIP AND TIN WIRE ENDS 1/4"



SOLDER CUP VIEW

ITEN	PART NO.	DESCRIPTION	QTY
1	500102	CONNECTOR, 4 PIN, FEWALE	L
2			
3			
4	400010	CABLE, 2 VIRE. SHIELDED	A/R
5	980050	SLEEVING, 1/4", SHRINK	A/R
6			
7			
В	960060	SLEEVING, 1/4". CLEAR SHRINK	A/R
9			
10			

	MET	ONE IN	STRUME	NTS	
	ASSY,	CABLE,	RAIN G	AUGE	
SIZE	FSOI 10.	DIG HO.	2745		HEY No
SCAL	E		SEEL	OF I	Г

Barometric Pressure Sensors

090D 091 Barometric Pressure Sensors convert absolute atmospheric pressure into a linear, proportional voltage, which may be used in any meteorological program.

Features

- Compact size
- Weatherproof enclosure
- Remote output
- Permanent calibration
- Robust construction

These sensors are inherently stable devices that do not require periodic service or routine recalibration.


Operation

The enclosure houses a solidstate pressure transducer, with linearization and amplification electronics.

The Model 090D is housed in a heavy duty fiberglass enclosure, suitable for harsh and severe environments. A hose barb is provided to enable the connection of a 1/4" sampling tube to the outside environment.

The Model 091 is contained within a small polycarbonate enclosure, and may be mounted outside or inside a building or other enclosure. Small inlet holes allow the atmospheric pressure access to the sensing element.

The standard range of the 090D/091 is 26-32 in. Hg,* suitable for elevations sea level to 1500 ft. Other ranges are available.

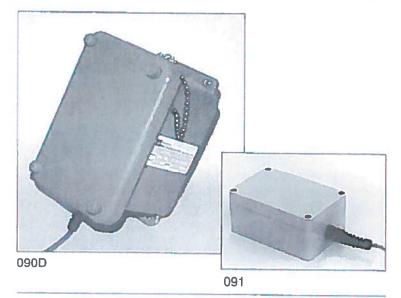

Specifications

Performance

Resolution Temp Operating Range Temp Compensated Range Accuracy

Electrical Characteristics

Power Requirement Sensor Output

Physical Characteristics

Weight, 090D Dimensions, 090D Weight, 091 Dimensions, 091 cm)

Ordering Information

Cable

Infinite

-40°C to 65°C -18°C to 65°C

 ± 0.04 in Hg (± 1.35 mbar) or $\pm 0.125\%$ FS

11 mA @ 12 VDC, Typical 0-1 VDC Standard 0-5 VDC Optional

2 lbs 5 oz (1.05 Kg) 5.5" x 5" x 7.5" (14x12x19 cm) 8.8 oz. (250 g) 2.13" x 3.2" x 5" (5.4x8.3x13

Specify elevation
Specify output voltage
#1169-xx (xx = length in feet)
Specify length in feet

 
Specifications subject to change without notice.

*Conversions: 1 in. Hg = 3.3864 kPa, 1 in. Hg = 33.864 mbar, 1 in. Hg = 25.4 mm/Hg



Met One Instruments, Inc.

Corporate Sales & Service: 1600 Washington Blvd., Grants Pass, OR 97526, Phone (541) 471-7111, Fax (541) 471-7116 Distribution & Service: 3206 Main Street, Suite 106, Rowlett, TX 75088, Phone (972) 412-4747, Fax (972) 412-4716 http://www.metone.com



MODEL 091 BAROMETRIC PRESSURE SENSOR

OPERATION MANUAL Document No. 091-9800



1600 Washington Blvd. Grants Pass, Oregon 97526 Telephone 541-471-7111 Facsimile 541-471-7116 Regional Sales & Service 3206 Main St., Suite 106 Rowlett, Texas 75088 Telephone 972-412-4715 Facsimile 972-412-4716

Barometric Pressure Sensor Model 091 **Operation Manual**

- 1.0 **GENERAL INFORMATION**
- 091 Barometric Pressure Sensor uses an active solid-state device to sense barometric 1.1 pressure. Self-contained electronics provide a regulated voltage to the solid state sensor and amplification for the signal output.
- 1.2 A 1169-XX' Sensor Cable is a 4-conductor shielded, vinyl jacketed cable. Length is given in -XX feet on each cable part number label.

TABLE 1-1

Model 091 Pressure Sensor Specifications

Performance

Calibrated Range Calibrated Operating Range

Operating temperature range Resolution

Accuracy

Accuracy Output

26-32" (standard)*

-18°C to +50°C -40°C to +50°C

Infinite

±0.04 in Hg (±1.35 mb) or

±0.125% FS

0-1V DC (standard)*

*Refer to model number of sensor. Example: 091 - 26/32 - 1

Basic Mod # Range ('Hg) Output Voltage (in this example, the sensor output is 0-1v for a range of 26 to 32" Hg)

Electrical Characteristics

Power Requirement Sensor Output

11 ma @ 12 VDC 0-1 VDC Standard 0-5 VDC Optional

Physical Characteristics

Weight

8.8 oz (250 g)

Dimensions

2.13" x 3.2" x 5" (5.4x8.3x13 cm)

2.0 INSTALLATION

- 2.1 <u>Mounting the Sensor.</u> Mount sensor in a convenient location with pressure inlet port facing downward.
- 2.2 <u>Installing the Cable.</u> The 1169 Cable Assembly contains four wires. Install the cable into the water-tight gland and connect cable as follows:

SIG = Signal Output (Wht)
COM = Signal Common (Grn)
+12 = +12V Power (Red)
COM = Power Com (Blk)


3.0 OPERATION

- 3.1 The Barometric Pressure Sensor has been calibrated at the factory, and will not change unless it is damaged. To check for proper operation of the sensor and module, it is advised that the module's output be checked against a local weather service facility. Exact correlation is not to be expected, due to geographical and meteorological variations. The sensor reads absolute barometric pressure, whereas local weather services readings are normalized to sea level values.
- One should keep in mind that nominal pressure, at sea level, is 30 inches of mercury and that for every 1,000 feet of elevation, the pressure decreases approximately one inch of mercury. EXAMPLE: A weather station at sea level may use a barometer with a range of 26 to 32 inches of mercury to cover all possible weather conditions. However, a weather station, located 4,000 above sea level, would require a range of 22 to 28 inches of mercury.

MODEL 091 BAROMETRIC PRESSURE SENSOR RANGE SELECTION GUIDE


ELEVATION	RANGE ("Hg)
0 to 1,500	26/32
1,501 to 3,500	24/30
3,501 to 5,500	22/28
5,501 to 8,000	20/26
8,001 to 10,000	18/24
10,001 to 12,500	16/22
12,501 to 15,500	14/20
15,501 to 19,000	12/18

- 3.3 Each sensor is provided with a calibration data sheet showing transducer outputs at two or more pressure levels. It is important to record these values, as they are required, should it ever be necessary to recalibrate the pressure translator module in the field. If these values are lost, the sensor can be returned to the factory for recalibration.
- 4.0 MAINTENANCE AND TROUBLESHOOTING
- 4.1 General Maintenance Schedule.
 - A. Inspect pressure inlet port occasionally to insure it is free of obstruction. No other periodic maintenance or calibration is required.
 - B. inspect sensor for proper operation per Section 3.1.
- 4.2 <u>091 Pressure Sensor Maintenance.</u> The pressure sensor is an inherently stable device that does not require periodic service or recalibration. Should service or recalibration become necessary, the sensor must be returned to the factory. Always inspect Model 091 Pressure Sensor to make sure that inlet port is clean and free from obstructions.

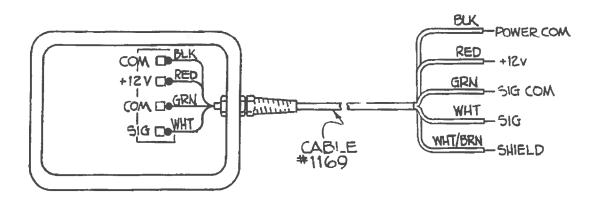

MODEL 091 BAROMETRIC PRESSURE SENSOR CABLE CONNECTIONS

(See Section 2.2)

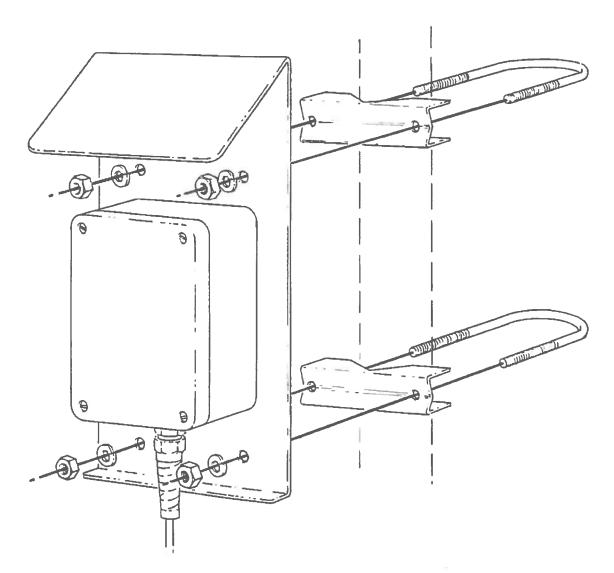

MODEL 091 MOUNTING DETAIL

INTERNAL WIRING DIACKAM

3 PIN MALE MINI BULK-HEAD CONNECTOR * M5-3102A-105L-3P BIACK WHITE RED

4)

Ŧ

CW-

NOTE: CLOCKWISE PIRECTION INDICATED IS FOR GEAR BOX MOUNTED POTENTIOMETER


	\cup





SENSON END

TRANSLATUR ERU

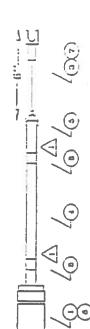

2 3 600183 LV 4 4000183 CA 4 4000183 CA 5 6 960076 SL 7 7 8 8 6 6 9 9 6 6 6 6 6 6 6 6 6 6 6 6 6 6		41
400011 400011 960675 960676	COMMECTOR, 3 PIN, 85	
400011 400011 400002 960076 900060		
000000 000000 000000 000000	LUG. SPADE, #6	-
960675 960675 900610 980060	CABLE, 3 COMB, T/SHIELD	A/R
960075 900510 960060	SLEEVING, 174", SIRLING	1/K
090090	SLEEVING, 1/8", SHRINK	77
800080	FIRE, 22 AUG. BHT/BRN	:.
1 3	SLEEVING, 174", CLEAR SHRINK	A/K
3		
0.1		

NUTE: CUMMECTOR SUPPLIED WITH EVAP GAUGE 550502

END.	
EACH	4669
18" FROM EACH	M IM
: 9	L'AMO
INENTIFY CABLE	E 18.31
TIFY	JASK I
146	
<	

	MET ONE INSTRUMENTS	STRUMENTS
	ASSY, CABLE, EVAPORATION	EVAPORATION
	CAUCE	541
	SIZ FEDINO DIC NO	SARA RY
Administrative and the second		O.F.
,	The second secon	1 0 1

Towers and Tripods

All meteorological systems need a means of raising the sensors to the required elevation above ground level. The standard reference point is ten meters, or approximately 33 feet; however, measurements are frequently required at any elevation from a few feet to several hundred feet. Met One Instruments meets this need with a full line of towers, tripods, and instrument lift systems.

Standard Stacked Towers

Standard stacked towers are built on a 12" equilateral triangle of 1" steel tubing with electrically welded, continuous steel "zig-zag" cross bracing. This design results in a structure that is at least onethird stronger than competing towers. All sections are hot-dipped galvanized after fabrication for corrosion protection. Individual 10-foot sections are light weight (31 pounds), and are easily connected to each other using double-bolted leg joints. Most installations use guying cables to anchors located at a distance of 80% of the tower height. However, the structure is strong enough to be self-supporting using a house bracket. Several base configurations are available, incorporating a concrete foundation.

Model 970664 40' guyed tower

Three standard 10 foot sections, and one tapered top section of tower are provided. A pier pin is provided which must be located within the foundation. The base of the tower fits over the projecting pin to locate the tower and prevent the base from moving off the foundation. Complete guying materials are provided, including a bracket assembly for the tower, guy cables, turnbuckles, clamps, thimbles, etc. Three anchor rods for guy points are provided, each of which requires a poured concrete foundation. Grounding rods are provided for the tower and each guy point.

Model 970668 40' guyed tower

This tower is identical to Model 970664, except that screw-in anchors are provided for the guy points in place of the poured foundation style.





Met One Instruments, Inc.

Corporate Sales & Service: 1600 Washington Blvd., Grants Pass, OR 97526, Phone (541) 471-7111, Fax (541) 471-7116 Distribution & Service: 3206 Main Street, Suite 106, Rowlett, TX 75088, Phone (972) 412-4747, Fax (972) 412-4716 http://www.metone.com


Model 970666 30' guyed foldover tower

This tower hinges at approximately 10 feet above ground level, allowing the instrumentation mounted on the tower to be serviced from ground level. One special foldover section, one standard 10 foot section, and a tapered top section are provided. A winch mechanism and cabling are included to activate the tilt mechanism. A base section is provided to be imbedded in the foundation, requiring an excavation approximately 3' deep. Four screw anchors to provide guy points to the hinge level are included. Complete guying materials, including guy cables, turnbuckles, clamps, thimbles, etc. are provided. Grounding rods are provided for the tower and each guy point.

Model 970667 40' guyed tower Three standard 10 foot sections, and one tapered top section of tower are provided. A base section is provided to be imbedded in the foundation, requiring an excavation approximately 3' deep. Three screw anchors to provide guy points are included Complete guying materials, including guy cables, turnbuckles, clamps, thimbles, etc. are provided. Grounding rods are provided for the tower and each guy point.

Model 970665 40' bracketed tower

Three standard 10 foot sections, and one tapered top section of tower are provided. A base section is provided to be imbedded in the foundation, requiring an excavation approximately 3' deep. Brackets are provided to support the tower to an adjacent building, eliminating the need for guy cables and anchors. Grounding rod is provided for the tower.

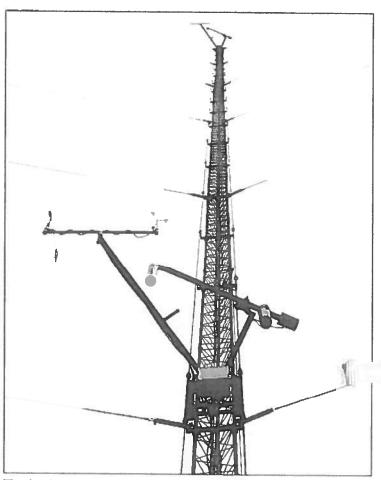

Typical Tall Tower and Instrumentation

Aluminum Towers

Aluminum alloy towers have the advantage of lightness of weight which makes relocation from site to site easier. They are also often used in mobile operations, such as on van or trailer mounted monitoring stations.

Model 970894 33 Foot aluminum tower, guys suggested but not required

Tapered top section with 11" leg width, straight center section, 11" width, Lower section with 14" leg width (reducing to 11"). Height to make 10 meters is provided by mast

extension. Steel base suitable for imbedding included. Guy kit will be provided to suit requirements.

Model 305831 35 foot telescoping aluminum tower

A light weight tower composed of 3 nested aluminum sections. An integrated winch is used to raise and lower the sections. Guy wires, turnbuckles, cable clamps, etc. are furnished to guy each section, and duckbill ground anchors are provided. The tower is crated for shipment. An optional power is available in either 110 VAC or 12 vdc.

Tower Options

#5284 Tower grounding system


The Model 5284 includes all materials required to provide lightning protection to the tower. An air terminal with 5' extension rod, braided 2-0 copper cable, ground rod, and all clamps are provided.

#2420 Instrument boom

The Model 2420 includes two special cross fittings and a five-foot long, 3/4" IPS aluminum boom. The Model 2420 allows the boom to mount to the side of any tower having a leg diameter of 1.25 inches (standard stacked towers). Aluminum construction for corrosion resistance.

Model 191 Crossarm \\ssembly

The primary mounting device for meteorological sensors. Includes cross fitting to mount to vertical or horizontal 3/4" IPS pipe, such as the #2420 Instrument boom.

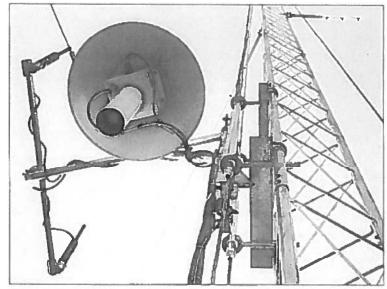

Instrument Lift Carriage

Model 173/175 Instrument Lifts


To avoid the difficulty and danger of tower climbing, the instrument lift is used to return sensors to ground level.

Service to the system is easily accomplished without the expense and delay of contracting a professional climber.

Major structural members are hot-dipped galvanized steel. A three-foot instrument boom is standard with all instrument lift systems.

The Model 173 provides a continuous loop drive cable to positively raise and lower an instrument carriage to a maximum height of 100 feet (30 meters). A powered drive winch is an available option.

The Model 175 is a light duty system utilizing a hand-crank winch. The maximum recommended height for this system is 50 feet (15 meters).

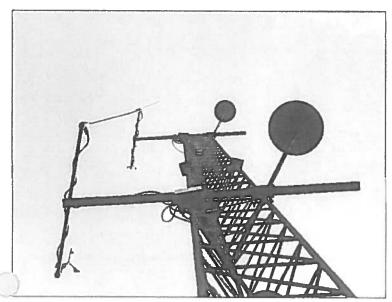

Boom and Crossarm Assemblies

Tripod Towers

Tripod towers provide an economical, quick, and easy solution for sensor mounting. We offer a variety of tripods to meet virtually any meteorological system requirement.

Model 2150/2151 Tripods

Lightweight and sturdy, these tripods are constructed of galvanized steel tubing, and come fully assembled. Installation is accomplished by simply opening the legs and installing the mast. Each leg is furnished with a swiveling foot, enabling the tripod to be installed either on a flat surface or a pitched roof. A complete guying kit, including ground stakes, is included. The 1-1/4" OD aluminum mast includes a reducer to allow use of an optional Model 191 Crossarm assembly.

Specifications


Model	Height to top of mast	Weight (approx.)
2150	11 Ft.	13 lbs.
2151	14 Ft.	18 lbs.

Model 6168/6230 Tripods

"Heavy-duty, self-supporting and extremely robust" describe these tripod towers. The unique design features self-contained guying and a wide footprint to provide strength and stability even in winds as high as 100 mph. Constructed of heavy aluminum tubing, the design features a fold-over mast to ease installation and facilitate servicing of the installed equipment. Heavy galvanized steel "feet and ankles" contribute to stability and are adjustable to conform to terrain variations. The feet can be staked to the ground for added stability. The strength, stability, and economy of these tripods make them a viable alternative to traditional instrument towers.

Specifications

Model	Height to top of mast	Weight (approx.)
6168	20 Ft. (6 M)	170#
6230	33 Ft. (10 M)	205#

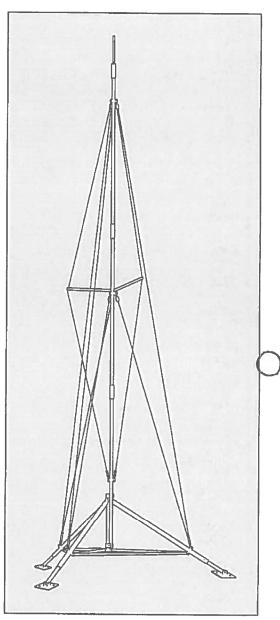

Model 6230

Tower Erection and Turnkey Systems

Frequently the customer will find it expeditious and economical for a single contractor to have complete site and system responsibility. Unfortunately it is not easy to find a company that knows both sensors and pouring concrete. Met One Instruments has this knowledge—and the experience—gained from supplying numerous turnkey systems throughout the country and overseas. Met One Instruments' project engineers are conversant in all phases of construction associated with meteorological sites. Consult our sales department for budgetary estimates or firm quotations.

MODEL 5284 TOWER GROUNDING SYSTEM

OPERATION MANUAL DOCUMENT 5284-9800



1600 Washington Blvd. Grants Pass, Oregon 97526 Telephone 541-471-7111 Facsimile 541-471-7116

Regional Sales & Service 3206 Main St., Suite 106 Rowlett, Texas 75088 Telephone 972-412-4715 Facsimile 972-412-4716

5284 Tower Lightning Rod And Grounding System

Introduction


High voltage electrical surges caused by lightning are a common source of failure of both sensors and associated electronics. In addition to the protection devices built in to our sensors, Met One provides has provided a tower ground system. The grounding system and lightning rod will increase the likelihood that the system will survive a lightning strike. However a direct strike, no matter how well protected, will likely result in component or system failure.

The part number 5284 Tower Lightning Rod And Grounding System provides an air terminal at the top of the tower, that is connected to earth ground using a heavy gauge copper wire. It provides a direct path to ground from electrical energy caused by a strike or by the EMF of a nearby strike. The system provides a 60 degree cone of protection from the apex of the air terminal to the ground.

Installation

Installation of the various components is very easy. The basic idea is to have the vertical air terminal at the top of the tower mounted using the two clamps and cable provided. At the base of the tower a ground rod is driven into the ground and the opposite end of the cable is attached to this point. If a base grounding kit was provided with the tower, add the additional ground rod to the base grounding kit to improve the ground resistance. See Figures 1 and 2 for basic details of the installation.

If the tower base grounding kit was supplied with the tower, be sure that the heavy gauge braided copper wire is used for attachment to the ground rod. The small #4 cables should be used for the connection from the tower legs to the other ground rods. For maximum effectiveness of the grounding system, the ground resistance to the rod should be less than 10 ohms.

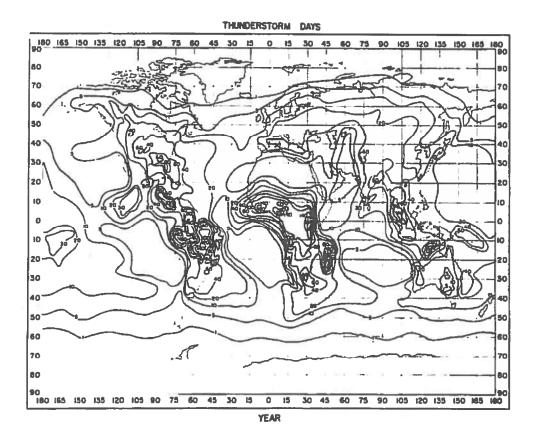

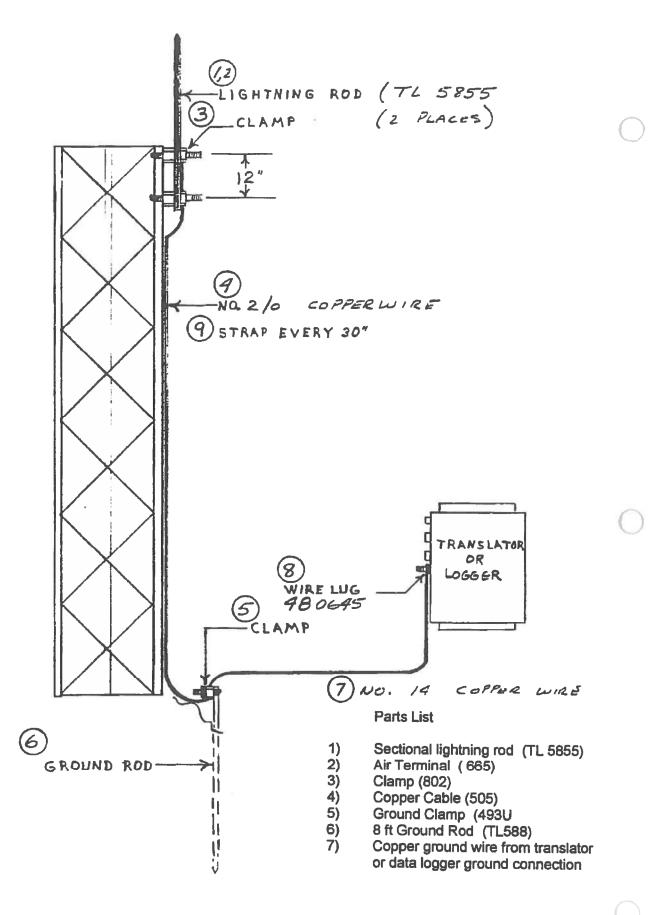


FIGURE #1 Tower Lightning Rod and Grounding System


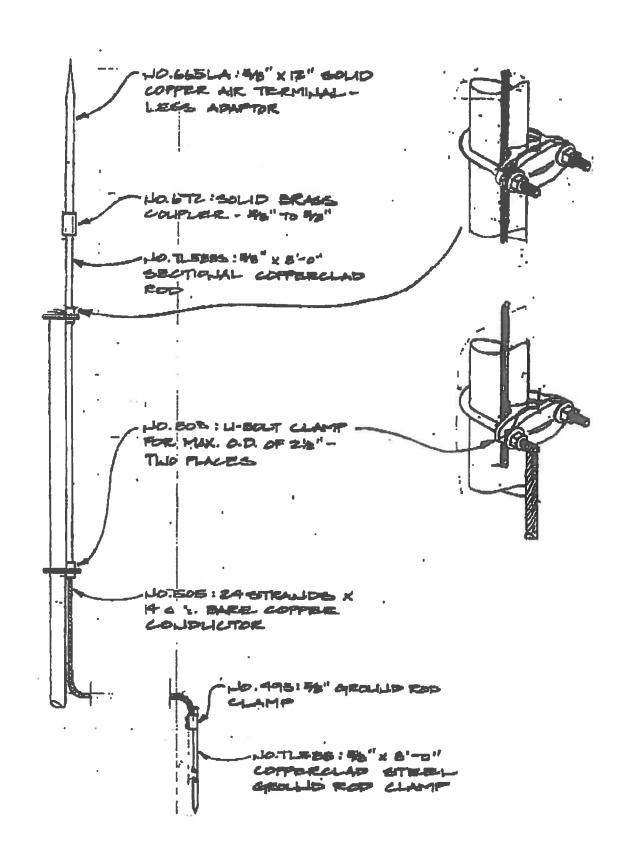


Figure #2 Clamping to lightning rod installation detail

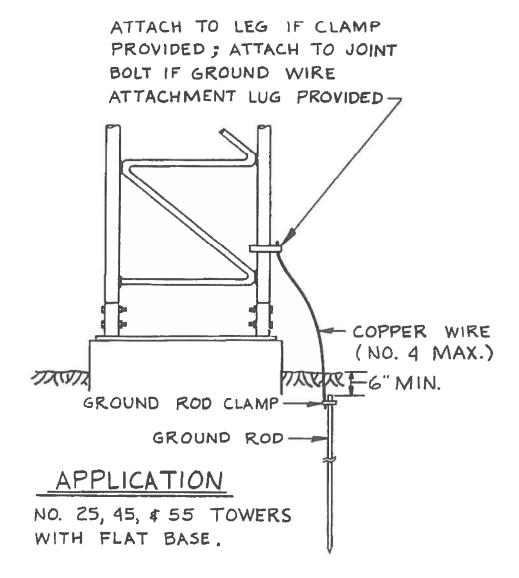

BASE GROUNDING KITS

Figure #3 Tower Base Grounding Kit Detail


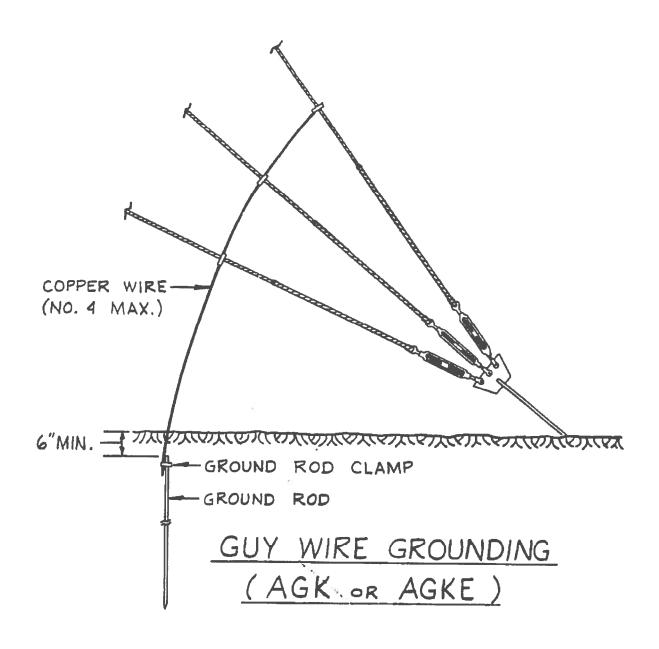



Figure #4 Anchor Grounding Kit Detail

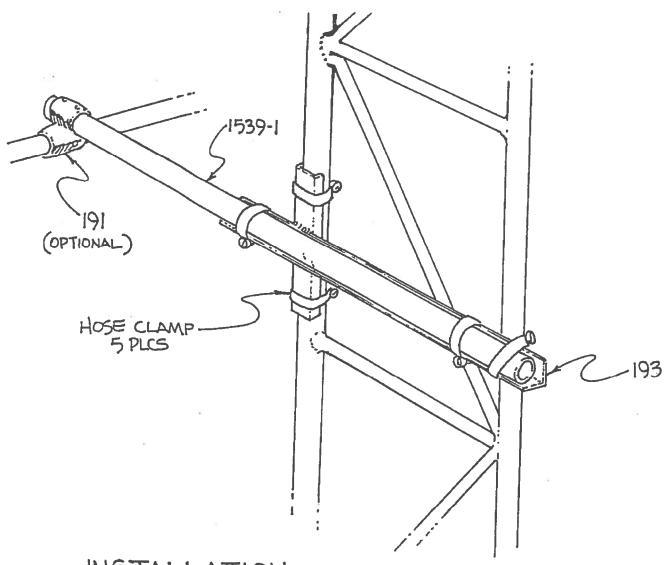

INSTALLATION
193 UNIVERSAL MOUNT
24JUN'92 TRAMS
DWG*6408

MAR 1 2 CT

		0
		0
		0

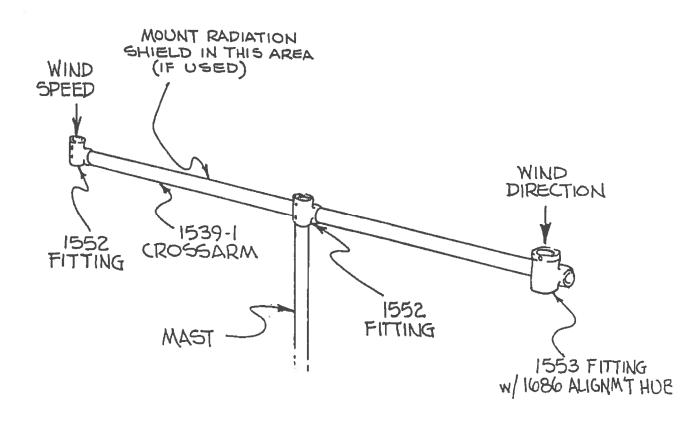

INSTALLATION 191-1 CROSSARM ASSY

M.18 1 1 1863

MET ONE NORTHWEST 9MAR 93 RUMS

DRAWING NO. 6400-1

Relative Humidity Sensor

083C

The Model 083C sensor probe represents sensitivity, accuracy, linearity and stability not encountered with conventional relative humidity sensors. It is extremely well suited for meteorological, industrial, laboratory and other demanding applications.


Features

- All solid state construction
- Fast response of less than five seconds
- Low power consumption of 4 ma at 12 VDC
- Easily cleaned using distilled water
- 0-1V output for 0-100% RH
- Will operate from a 12 VDC battery

The model 083C RH sensor can also be supplied with a Temperature Sensor mounted in it and used with various radiation shields for reliable, accurate measurements.

Operation

The model 083C Relative Humidity Sensor is based upon the capacitance change of a polymer thin film capacitor. A one-micron thick dielectric polymer layer absorbs water molecules through a thin metal electrode and causes capacitance change proportional to relative humidity. The thin polymer layer reacts very fast, and therefore, the response time is very short less than five seconds to 90% of the final value of relative humidity. The sensor responds to the full range from 0-100% relative humidity. Its response

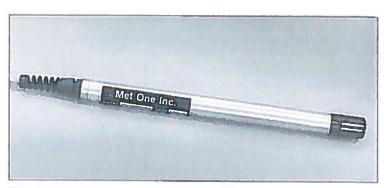

The Model 083C Relative Humidity Sensor is extremely well suited for meteorological, industrial, laboratory and other demanding applications.

is essentially linear, with small hysteresis, and negligible temperature dependence.

Construction

The sensor is mounted in a small probe which contains all the electronics necessary to provide an output for indicating or recording humidity. Since the capacitance change of the sensor is sensitive only to the ambient humidity, tem-

perature compensation is not required for most applications. The probe body is water tight and made from corrosion resistant aluminum. Immersion in water does not affect the calibration of the sensor.

The polymer material is resistant to most chemicals. The calibration of the sensor is not affected by liquid.

Specifications

Sensing Element: Thin film capacitor Range:

0-100% Relative Humidity Temperature Range: -20°C to +60°C

Response Time:

Less than 15 seconds at 68°F

of Final (with filter) ±3% Accuracy: 0-10% 10-90% ±2% 90-100% ±3%

0.04% RH/°C

Temperature Coefficient: Output: 0-1.00 VDC - Standard Input Power:

4 MA at 12 VDC Battery Dimensions: Diameter 0.75" Length 7.5" Weight: 2.5 oz.


Subject to change without notice.



Met One Instruments, Inc.

Corporate Sales & Service: 1600 Washington Blvd., Grants Pass, OR 97526, Phone (541) 471-7111, Fax (541) 471-7116 Distribution & Service: 3206 Main Street, Suite 106, Rowlett, TX 75088, Phone (972) 412-4747, Fax (972) 412-4716 http://www.metone.com

Ordering Information

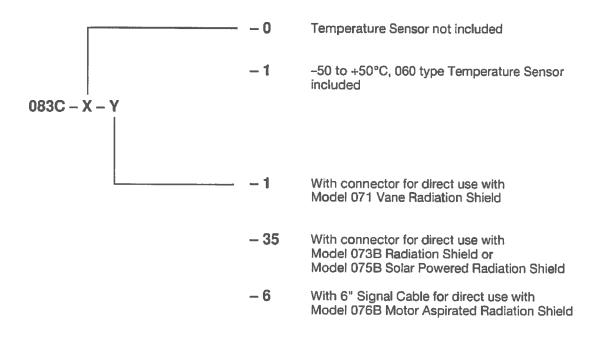

MODEL 083C RELATIVE HUMIDITY/TEMPERATURE SENSOR

OPERATION MANUAL



1600 Washington Blvd. Grants Pass, Oregon 97526 Telephone 541-471-7111 Facsimile 541-471-7116

Regional Sales & Service 3206 Main St., Suite 106 Rowlett, Texas 75088 Telephone 972-412-4715 Facsimile 972-412-4716

083C RELATIVE HUMIDITY/TEMPÉRATURE SENSOR OPERATION MANUAL

1.0 GENERAL INFORMATION

- 1.1 The 083C Sensor contains an extremely accurate and sensitive relative humidity sensor which responds to the full range of 0-100% humidity. Response is linear with small hysteresis and negligible temperature dependence. The sensor is designed to be housed in a radiation shield when used outdoors. Certain models also contain a high-accuracy linearized air temperature sensor, permitting simultaneous measurement of relative humidity and temperature.
- 1.2 The 083C Sensor model number describes the sensor options as follows:

083C - X - Y

X is the temperature option:

0 = no temperature sensor

1 = -50 to +50°C temperature sensor

Other temperature options are available.

Y is the radiation shield compatibility option:

<u>-Y</u>	Radiation Shield	Signal Cable
- 1 - 6	071 076	1873 -ZZ (ZZ = cable length in feet) 2144 -ZZ
- 6	077	2408 - ZZ
- 3 5	073B	2348 - ZZ
-35	075B	2348 -ZZ

1.3 The Sensor Cable is vinyl-jacketed and shielded. Cable length is given in feet on each cable part number. The cable part number depends on which radiation shield the sensor is mounted in. The 077 Radiation Shield has a screw type terminal strip to accept wire leads from the 2408 cable. All other Radiation Shields and cables have Mil Spec screw-on or twist-on cable connectors.

The 083C-X-6 sensor mounts in either a 076B Radiation Shield, with a 2144-ZZ signal cable or a 077 Radiation Shield with a 2408-ZZ signal cable.

083C-9800 10/94 Page 1

Table 1.1
Model 083C Relative Humidity Sensor Specifications

Sensing Element Thin-film capacitor

Range 0-100% RH

Temperature Range -20°F to +50°C

Response Time 15 seconds at 68°F

90% of final RH value

Accuracy Better than ±3% between 10% and 90%

Hysteresis For 0% to 100% to 0% excursion less than

±1%

Temperature Coefficient ±0.04% per 1°C

Output 0 - 1V at full scale (standard)

Input Power 12V DC \pm 2V, 12 ma

Table 1.2 Model 083C-1 RH/Temp Sensor Specifications

Range -50° to +50°C (standard range)

Linearity ±0.15°C


Accuracy ±0.10°C

Time Constant 10 sec.

2.0 INSTALLATION

2.1 If sensor comes mounted in a radiation shield, refer to radiation shield manual section for mounting details. Sensors not furnished in a radiation shield should be mounted in a representative location having good air flow and shaded from sunlight or other heat radiation sources that would affect measurement of relative humidity or temperature.

083C-9800 10/94 Page 2

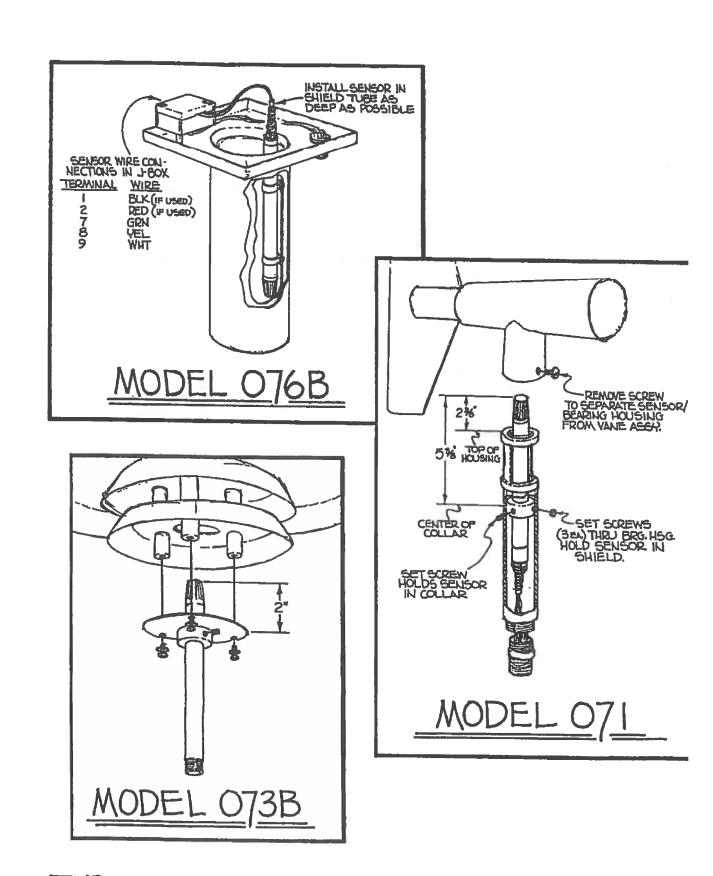

TYPICAL 083C SENSOR INSTALLATIONS IN STANDARD RADIATION SHIELDS

3.0 OPERATIONAL CHECK-OUT AND CALIBRATION

3.1 Relative Humidity Measurement

3.2 Relative Humidity Sensor Check-out

- 1. To verify correct wiring and as a rough test of sensor operation, blow on the sensor. The relative humidity will rise to a higher level.
- 2. The Relative Humidity Sensor has been calibrated at the factory and will not change unless it is damaged. To check for proper operation of the sensor it is advised that the output signal be checked against a local weather service facility. Exact correlation is not to be expected due to atmospheric and geographical variations.

3.3 Temperature Sensor

Compare actual readings with precision mercury thermometer. As an alternative, measure sensor resistance with a Lo Current Digital Ohm Meter and compare readings of temperature vs resistance. See Table 3.1.

4.0 MAINTENANCE AND TROUBLE SHOOTING

4.1 General Maintenance Schedule*

- 6 12 Month Intervals:
- A. Inspect sensors for proper operation per Section 3.0.
- B. Clean Relative Humidity sensor element per Section 4.2A.

*Schedule is based on average to adverse environments.

4.2 083 Relative Humidity Sensor Maintenance and Calibration

Warning:

The sensor can be miscalibrated or permanently damaged through improper acts. Do not attempt a repair or calibration if you are unsure of the procedure. Do not touch if you do not know how.

This instrument should operate for an extended period of time with a minimum of care or maintenance.

If parts or maintenance assistance are required, contact Met One Instruments. Obtain shipping instructions before returning any unit.

083C-9800 10/94

A. Maintenance

Cleaning the Sensor Element. Unscrew the filter. Dust and other particles may be removed by gently blowing on the sensor chip. DO NOT USE COMPRESSED AIR. After dusting, the sensor element may be wiped clean with a soft brush dipped in distilled water. DO NOT USE DETERGENTS, DO NOT APPLY POWER TO THE SENSOR WHEN CLEANING, and do not reconnect power to the sensor until the element has dried.

CAUTION: NEVER TOUCH THE SENSOR CHIP WITH BARE HANDS

- 1. The life of the sensor is related to the environment in which it operates. In a pure air and water vapor surrounding, the sensor element will have an indefinite life. The presence of chemical pollutants in the environment may corrode the materials of the sensor chip. The polymer material is resistant to most chemical attacks, but the metal electrodes, are sensitive to corrosion effects, particularly when a DC voltage is applied to the sensor. The most harmful pollutant has been sulphur dioxide absorption in small soot particles. When such particles fall on the thin metal electrode, they may, if water condensation is present, form traces of sulphuric acid to corrode the surface of the sensor. For these reasons, a careful cleaning as described in the preceding paragraph is recommended whenever the sensor has been exposed to corrosive pollutants. Also, a periodic cleaning every two weeks with an atomizer of distilled water, thoroughly washing the chip clean, may remove harmful particles before they can damage the sensor. Be sure that no power is applied when washing the chip and that power remains off until after the chip has dried.
- 2. Replacement of Sensor Element. If the sensor element has been damaged, it can be easily replaced. Disconnect power to the probe. Unscrew the filter. Un-solder the old chip and solder a new one in its place. The sensor chip is very delicate, so observe the following precautions. DO NOT TOUCH THE CHIP WITH BARE HANDS. Handle the chip only by gripping its lead with pliers. When soldering, hold the lead with the pliers to prevent the heat from the soldering operation from damaging the chip. Do not bump the chip when reinstating the protective grid.
- 3. After replacement of the sensor element, the humidity probe must be recalibrated.

B. Humidity Probe Calibration.

- Before attempting to recalibrate the probe, make sure that the translator module containing the signal conditioning electronics is still properly calibrated. If 0% and 100% do not produce corresponding readings on the indicator, recalibrate the translator module.
- 2. The calibration method described in this instruction manual is based on the constant water vapor pressure over saturated salt solutions and constant temperature. Materials used for the calibration are Lithium Chloride (LiCl) and Sodium Chloride (NaCl). The former creates a humidity of approximately 13% and the latter approximately 76% in 68°F (20°C) ambient temperature. Both of these chemical agents are available from chemical suppliers. To guarantee accurate calibration, the salts must be of high purity.

TEST EQUIPMENT REQUIRED:

2 Calibration Bottles: HM-111-CG-L and HM-111-CB-N Lithium Chloride Salts, Reagent Grade 1 Sodium Chloride, Reagent Grade 1 Thermometer to measure ambient temperature Distilled water

3. Preparations for Calibration

Refer to instructions with the calibration bottles for mixing the solutions.

The calibration bottles can be used for up to one year without changing fresh chemicals. The bottles should be stored in a place with constant temperature, so as to have them ready for use with just a short preparation time. Do not shake the bottle with salt solution before use. Care should be taken to see that there are no droplets of salt solution inside the mouth piece of the bottle. This might affect the accuracy of the calibration. Do not get any salt solution on the sensor element directly.

083C-9800 10/94 Page 6

TABLE 4-1 Calibration Tables

LITHIUM CHLORIDE

Ambient Temperature °C	10	15	20	25	30	35	40			
Calibration Value % RH	14.3	13.8	13.4	13.0	12.8	12.7	12.6			
SODIUM CHLORIDE										
Ambient Temperature °C	10	15	20	25	30	35	40			
Calibration Value % RH	75.2	75.3	75.5	75.8	75.6	75.5	75.4			

C. CALIBRATION FOR LOW HUMIDITY (13% RH)

- 1. Unscrew the filter. Do not bump the sensor element while removing the grid.
- 2. Pull the rubber plug out of the lithium chloride (LiCl) bottle, and push the sensor probe in its place in the cork's sleeve. The sleeve is fitted with a safety flange and prohibits the probe from falling through.
- 3. Read the ambient room temperature.
- 4. Note the humidity percentage from the lithium chloride calibration table, which corresponds to the temperature in question.
- 5. After 1 hour, read the humidity value, If the reading differs from the table value, adjust R15, zero adjust.
- 6. After use, close the bottle tightly with the rubber piug.

D. CALIBRATION FOR HIGH HUMIDITY (76%)

Repeat the calibration procedure as described above, but now using the sodium chloride. Adjust R18 (span adjustment) if necessary.

E. Repeat steps C and D until no further adjustments are required.

083C-9800 10/94

MODEL 510070 RELATIVE HUMIDITY CALIBRATOR

1.0 GENERAL INFORMATION

1.1 Suitable for all probes. Calibration by means of lithium chloride and sodium chloride saturated salt solutions. Bottles for salt solutions in metal box providing stable temperature. Due to the minimal space of air above the salt solution no ventilation is needed. Solid construction. Humidity and Temperature scale for each salt solution printed on the box lid. A thermometer situated between the salt bottles in the box provides a very reliable calibration.




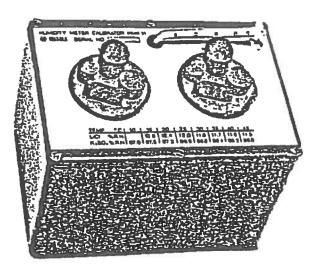


Figure 5
Calibrator before setting up

083C-9800 10/94 Page 8

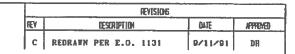

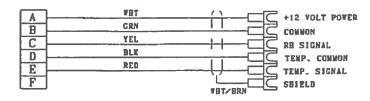


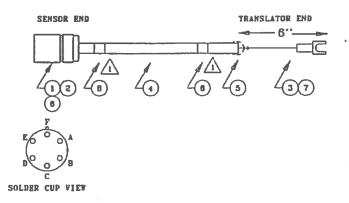



ITEM	PART NO.	DESCRIPTION	QT1
1	500391	CONNECTOR, 6 PIN, PENALE	1
2	480508	CLAMP	l i
3	000193	LUG. SPADE. #6	6
4	400014	CABLE, 5 COND., SHIELDED	A/R
5	960050	SLEEVING. 1/4". SHRINE	A/R
6	980075	SLEEVING. 1/8". SHRINK	A/R
7	980510	WIRE, 22 AVG. WHT/BRN	8"
8	960060	SLEEVING. 1/4". CLEAR SHRINK	NR
9			
10			

Λ	IDEN	HFY	CAL	ILE	18"	FR	OM	EACH	END.
\triangle	DASE	NUMI	PER	=	LENGT	Ħ	IN	PEET.	,

MET O	NE INSTRUMENTS	
	CABLE, 083 RH TEMPERATURE	
SIÆ FEDI 10.	^{016 10.} 1873	EV
SCALE	9€1 1 OF	

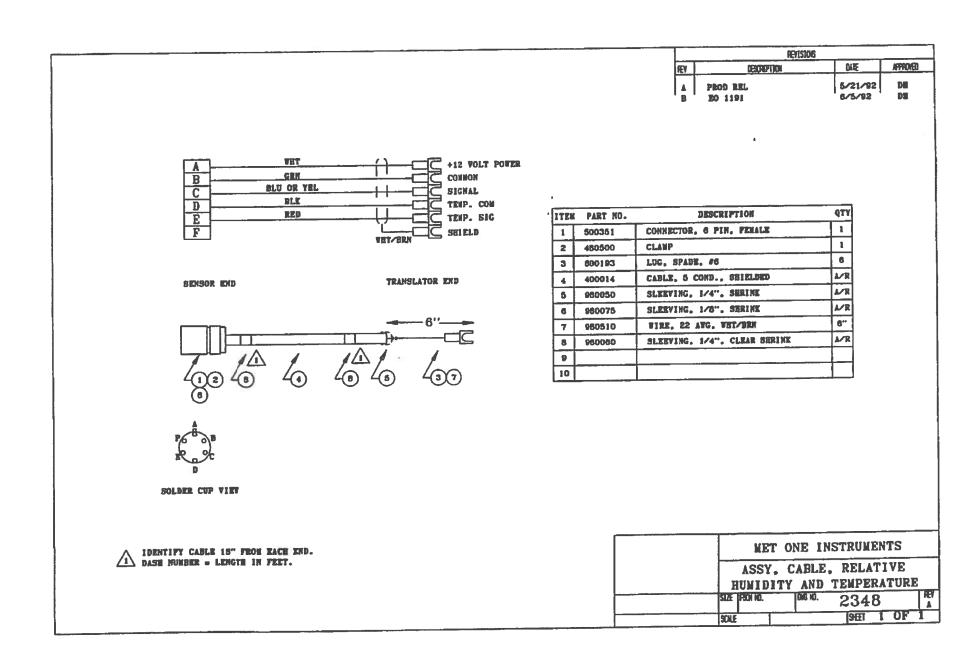

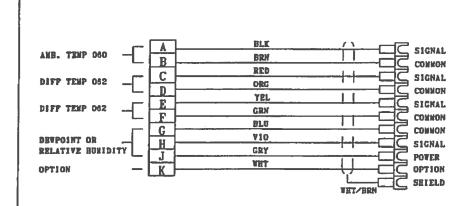

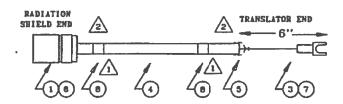



SOLDER CUP VIEW

IDENTIFY CABLE 18" FROM EACH END.

BASE NUMBER = LENGTH IN FEET.

CUT OFF VHT/BER AND VHT/BLE VIRES AT BOTE ENDS.
SOLDER VHT/BER VIRE TO SHIELD ON TRANSLATOR END.
USE 11EN 6 TO COVER SOLDER JOINT ON SHELLD.

PEYISJONS								
ÆY	DESCRIPT FOR	DESCRIPTION BATT						
D	REDRAWN AND ADD PARTS	LIST	9/13/91	DH				

ITEX	PART NO.	DESCRIPTION	QTY
2	500296	CONNECTOR, 10 PIN	1
2			
3	600193	LUG, SPADE, #6	6
4	400017	CABLE, 12 TIRE, SEIELDED	₩R
5	960096	SLEEVING, 3/8, SHRINK	NR
6	960093	SLEEVING, 3/32, SERINK	₩R
7	980510.	VIRE, 22 AVG. VHT/BRH	g.,
8	960085	SLEEVING. 1/2". CLEAR	NR
9			
10			

MET ONE INSTRUMENTS	
ASSY, CABLE, SIGNAL OUT, O76B /JUNCTION BOX	
 SLE 1908 NO. DIG NO. 2144	EY D
SOLE SHEET I OF I	

MODEL 077 RADIATION SHIELD WIRING TABLE CABLE NO. 2408

USE
AT SIG
AT COM
RHCOM
RH +12V
RHSIG
SHIELD

MODEL 077 RADIATION SHIELD WIRING TABLE CABLE NO. 2409

COLOR	USE
RED	POWER
BLACK	СОМ

RESISTANCE TABLE 3.1 MODELS 060A-4,063-2

TEMP	DEG !	C	RNOM*	RCAL	TEMP	DEG C	RNOM*	RCAL
	012745678901274567890127456789012745678901274567890		05050505050505050505050505050505050505	09992486850179170680581410450947576702810655305575253748862192211965666938716687964135849083930641992753027535063964198765588887752938476639641987653641927655938275164224605719503304457142524999987655964198765792593847663966307420974208642097542198654310987657925938476639659630742097542097554219786541987657925938476554332221100000999888888777776666666655555554444		5555555555566666666666667777777777788888888	05050505050505050505050505050505050505	59594546004030925490201401036750375221888285612223066 2932767274061330878880161370887207101189380928491904 2932767274061330326596606456938372691108377661430227 38781756830891518779273199002505298779147273086555567 544445566780235803581481592615948372727378394061739517 76543210098877655443321100998877665544332211100999887766665

*VALUE WITH A 3200 OHM RESISTOR IN PARALLEL WITH THE SENSOR

RANGE 0 TO 100 DEGREE C
THERMISTOR BEAD 44201
RNOM = (-17.115)T+2768.23 WHERE T = TEMPERATURE IN DEGREE CENTIGRADE

RESISTANCE TABLE 3.1 MODELS 060A-4,063-2

TEMP DEG F	RNOM*	RCAL	TEMP DEG F	RNOM*	RCAL
2745678901274567890127456789012745678901234567890123	210098766543221098876594432100987665432210988765444321 27271616161616098876594432100987665432210988765444321 889990011122334455566778899900112223344555666778899900112223344432110987659443211098765943210987659443211098765943210987659443321098765944332109876594321098765943210987659443321098765944332109876594433210987659432109876594433333333333333333333333333333333333	1161875013126672991378554575751091240966752559764578 001763773535517288223131193004557510912409667525597645578 0053172582059844213119300435831133159882424243779 055566388336187777764404662551300314252388189301521449770 100505173955282630775200753008713692615908284189777852087 00090817546635559444433333222211111111111111111111111111	88888899999999999999012345678900123456789012345678901234567890123456789012345678901234567890123456789012345678901234567890123456789012345678901234567890123456789012345678901234567890123456789012345678901234567890123456789012456789012456789012456789012456789012456789012456789012456789001245678901245678901245678901245678901245678901245678901245678900124567890124567890124567890124567890124567890124567890124567890012456789012456789012456789012456789012456789012456789012456789001245678901245678901245678901245678901245678901245678901245678900124567890124567890124567890124567890124567890124567890124567890012456789012456789012456789012456789012456789012456789012456789001245678901245678901245678901245678901245678901245678901245678900124567890124567890124567890124567890124567890124567890124567890012456789012456789012456789012456789012456789012456789012456789001245678901245678901245678901245678901245678901245678901245678900124567890124567890124567890124567890124567890124567890124567890012456789012456789012456789012456789012456789012456789012456789001245678901245678901245678901245678901245678901245678901245678900124567890012456789001245678900124567890012456789001245678900145678900124567890012456789001245678900145678900014567890001456789000145678000000000000000000000000000000000000	8024680246802468024680246802468024680246	3943918317258651331049202773736128404538273557424880 2790344053122772355937600277307068751259216322068552478 0657792589977242777226557212507766689135665416022947754897 06573596446064346606311125940867926285322255555555555555574444444444444444444

*VALUE WITH A 3200 OHM RESISTOR IN PARALLEL WITH THE SENSOR

RANGE 32 TO 212 DEGREE FARENHEIT THERMISTOR BEAD 44201 RNOM = (-9.508) T+3072.48 WHERE T = TEMPERATURE IN DEGREE FARENHEIT

RESISTANCE TABLE 3.1 MODELS 060A-4,063-2

*VALUE WITH A 3200 OHM RESISTOR IN PARALLEL WITH THE SENSOR

RANGE 32 TO 212 DEGREE FARENHEIT THERMISTOR BEAD 44201 RNOM = (-9.508) T+3072.48 WHERE T = TEMPERATURE IN DEGREE FARENHEIT

TABLE 3.1b MODELS 060A-2, 063-1, 064-2

				511014	DOM	
TEMP DEG C	RNOM*	RCAL	TEMP DEG C	RNOM*	RCAL	
09876547210987654721098765472109876547210 5444444447777777777777222222222222211111111	07418529630741852963074185296307418529630 482693704825936047159260371482693704815936047158269 421976431986431086531108753208753209754209760471976430 67889012334456789901234456789901234425678 5296318529630741863074185296312344567899901234445678 0009999998888888887777777777666666666532198630741811111111111111111111111111111111111	06631091469561471315460807488643777714452582048171169577 1842513190683336068473511748922598905577368820871172955 1865333400388533360684735117489225989055773688959645 186533740038887559451354488357555555773688959645 186533745088163312447174883577777666669548796696695459645 1865377155450881633124717471111358265173963198676666754596445 18653336085777776666655352098776444444444333333333333333333333333333	1234567890127456789012745678901274567890	741852963074185296307418529630741852963074185296307418529630741852963074185296307418529630741852963074185296307418529630741582693714825933604815926037159999999999999998888888777777777777777	524484640805885463623781649569630860114504675296378993789126593441043820999060888999169342338150467529453789008476113108133558828103675570341235034133852945378800847611311091373588828103675757034123503413387211583160025052100024828281039614426775999686093338721158583100037736048209137383333333333222222222222222221111111111	

* VALUE WITH 23.1K RESISTOR IN PARALLEL WITH SENSOR

```
RANGE -50 TO +50C OR -58 TO +122F THERMISTOR BEAD 44212 RNOM=(-129.163)T + 13698.3 WHERE T = TEMPERATURE IN DEGREE CENTEGRADE For RCAL: Where: Tc = Temp (deg C Tc = ((((R+^{-1}) + (23100^{-1}))^{-1} - 13698.3)/-129.163 Rt = ((((-129.163Tc) + 13698.3)^{-1}) - (23100)^{-1})^{-1}
```

TABLE 3.1B MODELS 060A-2, 063-1, 064-2

TEMP	DEG	E	RNOM*	RCAL	TEMP	DEG E		RCAL
	87654321098876543210987654321098765432109876543210987654321098765443210988765443210988765440098766544009876654400987665440098766544009876654400987665440098766544009876654400987665440098766544009876654400098766544000987665440009876654400098766544000987665440000987665440000000000000000000000000000000000		04937726059372605938260593826159948261594827150 468937726059372605938260593826159948261594827150 6421197542205793826059382615938261594827150 58146925813692580369314703681470368147925814692580369 000098877658136924703691470368147025814692580369 00009999999999999998776554322110098777777777777666666666666666666666666	63687329499880206353105214104920775277615647688030676591323 34055551902323030994529322577712990225377615647688030676591323 844142373528714430244391651931262457657211112013912116808442231 766527845556445555412991655193126218815092611934648 8378040755564455554169969956352300557712886706453333468913579 83795288518552974297520864319764310876432198654433333455578913579 85795288518529774297520864319764310876742088654433333455578913579 8579528815006999564311976432198654433333455578913579 85795288150069995564310876432198654433333455578913579 857952881500699955643108764321986566666666555555555555555555555555555		1274567890127456789012745678901274567890127456789012745678901274567890127456789	36925814703692581470369258147036925814703692581470369258147 748271581470369258147036925814703692581470369258147 748277036913716048837160493716049372604937260593 74827703691470368035803570257025702479372681358 7482770368136421975420875310864319754208753108643197542087531086431976420 758770369247036814702581479258136925803692570369147036 758770369258147035814792581333333333333333333333333333333333333	\$04448666605801274629410184661601828875534442823203771107891679 33834784278025095402403455712121064001053444282320862622 33834784278027764739334845571212106400105344428232086262622 71928794199135814688866276668655565565081043769818906619289 25703714888915594978839495062839577779037693727306418418466555 109998776554382615949383939333333333333333333333333333333

*VALUE WITH A 23.1K RESISTOR IN PARALLEL WITH SENSOR

RF GE = -58 TO +122 DEGREE FARENHEIT. The RMISTOR BEAD = 44212 RNOM = (-71.757) T +15994.5 WHERE T = TEMPERATURE IN DEGREE FARENHEIT

TABLE 3.1B MODELS 060A-2, 063-1, 064-2

TEMP DEG F	RNOM*	RCAL	TEMP DEG F	RNOM*	RCAL
01234567890123456789012345678901234567890	826092581447036925814703692581470369258147003692581477036925803580358035803580358035803580358035803	11133580388966817742639228001683518230167077398424503927046114066886660557303060750901822659842246812311711808189177942233694838150275721386718992888888777777666665555442233332222222222222211111111111111	10034567890123456789012 11111111111111111111111111111111111	88922581470369258147036 1025771581470369258147036 1025778371504837716036 1025748147029758142708758110 1025814270877777777777777777777777777777777777	14302702710244537772179 77298.80964123276537772179 78908.995575327677759642 79908.99575327677759642 11337531986470337894442 1111864826085 1111864821198645 11118695 1111864821111111005

*VALUE WITH A 23.1K RESISTOR IN PARALLEL WITH SENSOR

RANGE = -58 TO +122 DEGREE FARENHEIT THERMISTOR BEAD = 44212 . RNOM = (-71.757) T +15994.5 WHERE T = TEMPERATURE IN DEGREE FARENHEIT

Wind Direction Sensor



The Model 024A Wind Direction Sensor is an accurate, durable and economical sensor suitable for a wide range of wind study applications. It is designed for long-term unattended operation in most meteorological environments.

Features


- Range to 100 mph
- Low starting threshold
- Broad temperature operating range
- Built-in alignment and calibration feature
- Accuracy of ±5°
- Stainless steel and aluminum construction

Operation

The sensor incorporates a precision wire-wound potentiometer for accurate resolution of wind direction. The potentiometer is directly coupled to the vane assembly. Variations in wind direction produce a corresponding varying voltage, which lends itself to both digital and analog measurement systems.

Construction

The construction of the sensor reflects the requirement for reliability and durability. Only the best corrosion resistant materials, such as stainless steel and anodized aluminum are used. The potentiometer meets stringent military specifications for sand, dust, salt spray and fungus resistance. The Model 024A sensor uses a quick-connect sensor cable. Cable length may extend hundreds of feet without affecting measurement performance.

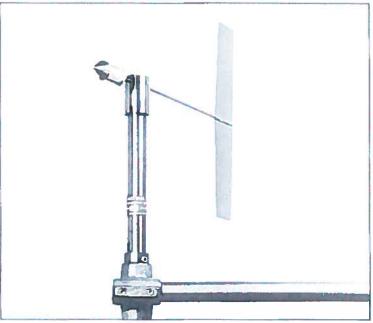

Accuracy, reliability and economy make the model 024A Wind Direction Sensor an ideal choice for most applications.

Specifications

Range 0-360°
Starting threshold 1 mph
Accuracy ±5°
Delay distance <5 feet
Damping ratio

Standard 0.25 (metal vane ass'y)
Fast Response 0.4 (foam vane ass'y)

Potentiometer
Sand, dust, fungus MIL-E-5272
Salt spray MIL-E-1293

Salt spray MIL-E-12934 Electrical range 0-360°

0-540° with appropriate translator

Operating range -50° C to +70° C

Weight 1 lb 2 oz

Mounting Model 191 Cross Arm

Ordering Information

Standard Model 024A (Metal Vane)
Fast Response Model 024A-1 (Foam Vane)
Cable #1806-xx (xx = length in feet)



Met One Instruments, Inc.

Corporate Sales & Service: 1600 Washington Blvd , Grants Pass, OR 97526, Phone (541) 471-7111, Fax (541) 471-7116 Distribution & Service: 3206 Main Street, Suite 106, Rowlett, TX 75088, Phone (972) 412-4747, Fax (972) 412-4716 http://www.metone.com

		()

MODEL 024A WIND DIRECTION SENSOR

OPERATION MANUAL Document No. 024A-9800



1600 Washington Blvd. Grants Pass, Oregon 97526 Telephone 541-471-7111 Facsimile 541-471-7116

Regional Sales & Service 3206 Main St., Suite 106 Rowlett, Texas 75088 Telephone 972-412-4715 Facsimile 972-412-4716

	,	
		0

024 WIND DIRECTION SENSOR OPERATION MANUAL

1.0 GENERAL INFORMATION

- 1.1 The Met One 024A Wind Direction Sensor uses a lightweight, air-foil vane and a potentiometer to produce an output that varies proportional to wind direction.
- 1.2 The Sensor Cable has a quick-connect connector with vinyl-jacketed, shielded cable. Cable length is given in -XX feet on each cable part number. An 1806-XX cable is used with translators having terminal strip connections, and an 1809-XX cable is used with translators having circular MS type connectors.

TABLE 1-1 Model 024A Wind Direction Sensor Specifications

Performance Characteristics

Azimuth Electrical 0-356°* Mechanical 0-360°

Threshold 1.0 mph

Accuracy ±5°

Damping Ratio Standard 0.25
Optional 0.4

Potentiometer Specs.

Sand, Dust, Fungus MIL-E-5272 Salt Spray MIL-E-12934

Temperature Range -50° C to +70° C

Delay Distance 5 ft.

Electrical Characteristics

Output Signal Varying resistance 0-10 K ohms

Physical Characteristics

Weight 1.5 pounds
Finish Anodized

Mounting Fixtures

Use with 191 Crossarm

3-Conductor Shielded

Type Cable, xx is cable length in feet

CAUTION: THIS POTENTIOMETER HAS A SHORTING GAP WIPER. ANY VOLTAGE APPLIED TO THE SENSOR MUST BE CURRENT LIMITED TO 5 MILLIAMPS.

2.0 INSTALLATION

- 2.1 024A Wind Direction Sensor Installation (See FIGURE 2-1)
 - A. Prior to installing the wind direction sensor on the crossarm remove the stainless steel screw from the hub and rotate the vane assembly slowly. It should rotate smoothly without hesitation or binding. Inspect the vane assembly to be sure it is not bent or damaged. Replace the screw in the hub.
 - B. Install the sensor in the bushing end of the mounting arm. The screw in the bushing will pass through the bushing and will tighten into the sensor housing.
 - C. Loosen the two set screws holding bushing and orient the sensor so that the counterweight is pointing south. The use of a transit/compass will assure accurate alignment. When the sensor is properly aligned tighten the crossarm fitting set screws and remove the stainless steel screw from the hub. The sensor may be removed and replaced without realignment by removing the mounting screw in the alignment bushing.
 - D. Remove and retain shoulder screw (11). Check to see that the vane assembly rotates freely.Rotate the sensor assembly until the counterweight is pointing due south.
 - E. Connect the cable assembly to the keyed sensor receptacle and tape it to the mounting arm.
- 2.2 <u>Wiring.</u> The cable assembly contains three wires. Typical wiring hookup is shown in FIGURE 2-1.
- 2.3 <u>Lightning Protection.</u> Weather sensors are sensitive to direct or nearby lightning strikes. A well-grounded metal rod or frame should be placed above the sensor installation. In addition, the shield on the signal cable leading to the translator must be connected to be a good earth ground at the translator end, and the cable route should not be vulnerable to lightning.

3.0 OPERATIONAL CHECK-OUT AND CALIBRATION

3.1 <u>024 Wind Direction Sensor Check-Out</u>

- A. Rotating the vane in a clockwise direction as viewed from above will increase the output up to the 360° point and it will start over 0°.
- B. The 024A wind direction sensor should be inspected periodically for physical damage to the vane assembly and cable connections. Inspect all vane assembly parts to be sure that they are securely fastened. Inspect the sensor connector and mating cable connector for corrosion.

4.0 MAINTENANCE

4.1 General Maintenance Schedule*

6-12 Month Intervals:

A. Inspect sensor for proper operation per Section 3.0.

24-36 Month Intervals;


- A. Factory replacement of potentiometer per Section 4.
- B. Recommended complete factory overhaul of sensor.

4.2 POTENTIOMETER REPLACEMENT

- 4.3 Remove the sensor from the crossarm and remove the vane assembly. Replacement of the potentiometer will require realignment with respect to 180 degrees. Use the following procedure to replace and realign the potentiometer.
- A) Loosen the three set screws which hold the potentiometer in the sensor housing. Pull the potentiometer up and out of the housing.
- B) Remove the three wires from the potentiometer assembly. Note the color code of the wires with respect to the pins on the potentiometer. (See the 024A Assy. Dwg.)
- C) Solder the wires to the new potentiometer and install the potentiometer in the sensor housing.

- D) Connect the ohmmeter across pins B and C on the sensor connector. Install the vane assembly and the stainless steel hub alignment screw. Do not tighten the two hub set screws at this time. Insert a small screwdriver in the access hole in the top of the hub and rotate the potentiometer until the resistance measured across pins B and C is equal to the resistance across pins A and C (approx. 6k ohms). Tighten the two set screws carefully. The potentiometer position will tend to move slightly as these screws are tightened.
- 4.4 RECOMMENDED SPARE PARTS LIST (Refer to Drawing #024A)

Ref	Part No.	Description
Α	2089	Aluminum Vane
В	2088	Vane Arm for Aluminum Vane
A,B	1286	Foam Vane and Arm Assy
С	1685-10	Hub
D	1814-1	Counterweight Arm for Aluminum Tail
D	1814-2	Counterweight Arm for Foam Tail
E	1057	Counterweight
A-E	2105	Aluminum Vane Assy, Complete
A-E	2106	Foam Vane Assy, Complete
F	2017	Potentiometer Assy
G	860015	Shoulder Screw
-	601625	8-32 x1/4 Set Screw
L	601680	8-32 x 3/8 Set Screw
K	601070	2-56 x 1/8 Screw

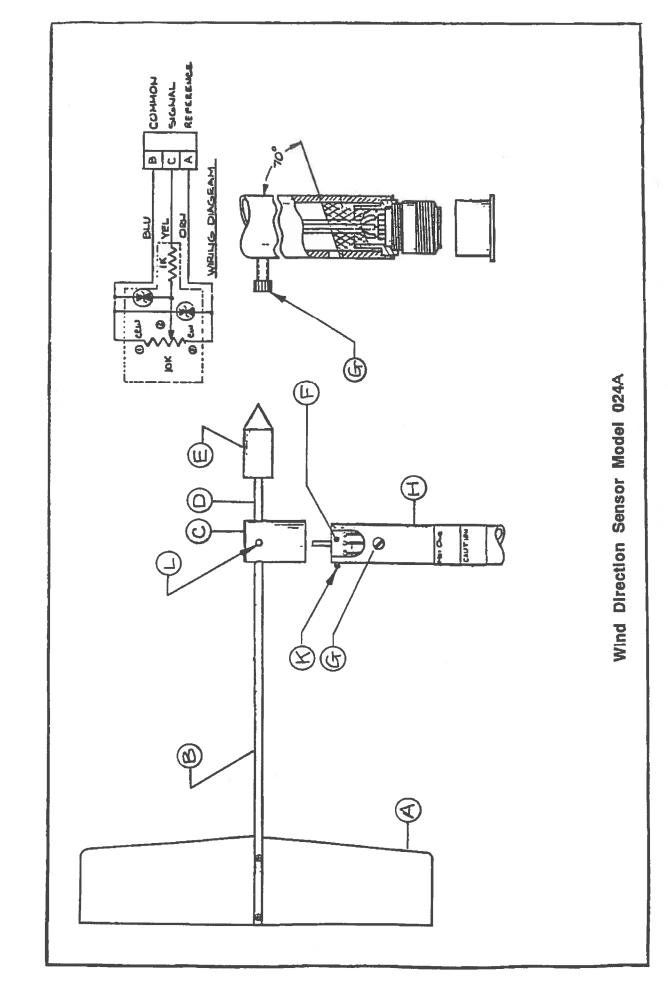



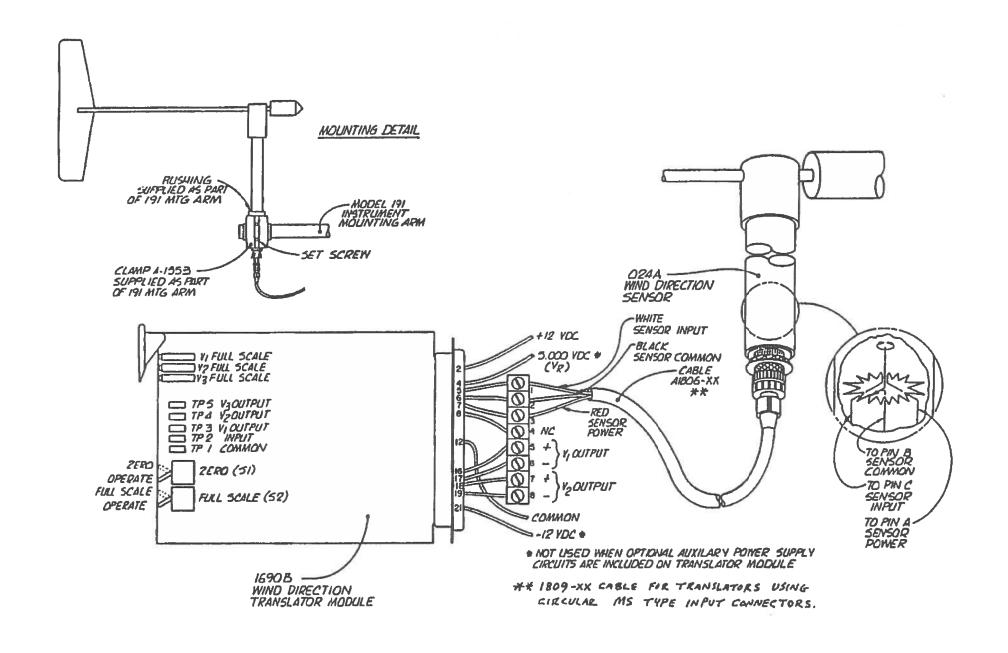



FIGURE 2-1. TYPICAL OZ4A INSTALLATION

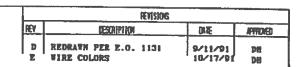

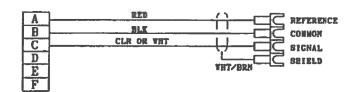

SENSOR END

TRANSLATOR END

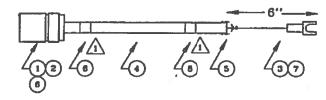




SOLDER CUP VIET

i tem	PART NO.	DESCRIPTION	qrı
1	500351	CONNECTOR, 6 PIN, PENALE	1
2	480500	CLAMP	1
3	600193	LUG, SPADE, #6	4
4	400011	CABLE, 3 WIRE, SHIELDED	MR
5	960050	SLEEVING. 1/4". SHRINK	N/R
8	960075	SLEEVING. 1/8". SERINK	MR
7	960510	VIRE, 22 AVG, VHT/BRN	6"
8	969060	SLEBVING, 1/4", CLEAR SHRINK	MR
9			
10			

1 DAME NUMBER = LENGTH IN THET.

ME	T ONE INSTRUMENTS	
	, CABLE, 024 WIND RECTION SENSOR	
SEAT FSON NO.	DG IO. 1806	RI
SCALE	9ET 1 OF	1

 

Evaporation Gauge

550502

Features

- Simple data collecting
- High resolution
- Analog output
- Corrosion resistant
- Range 0-8"


The Model 550502 Evaporation Gauge measures the water level in a standard U.S. Class A evaporation pan (Model 550501) and provides an output proportional to that level. The gauge employs a uniquely balanced sensor assembly to allow high resolution and simple data collection without hook gauge readings and time consuming, frequent visits to the site.

The sensor assembly includes one polypropylene float which rises and falls with the water level in the pan. The movement of the float is transferred to a 5K-ohm potentiometer by means of a rack and gear assembly. The mechanism is designed to eliminate backlash. The output range is 0 to 8 inches, with a measuring accuracy of 1%.

Movement of the float assembly also moves a pointer over an indicating scale for convenient water level checks and comparison to output device readings. The scale is graduated in English units on one side and metric units on the other.

The potentiometer output can be input directly to a data acquisition system.

Alternately, it can be input to a signal conditioning module.

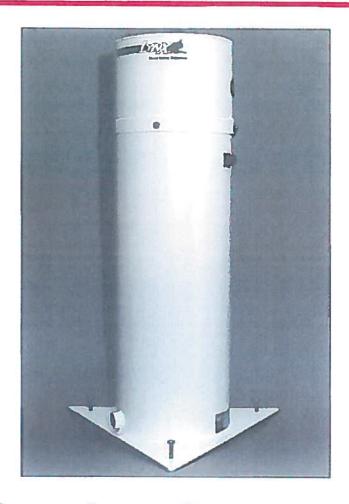

Evaporation Pan

It is constructed of low carbon stainless steel and is heliarc welded. The pan is normally installed on a level wooden platform set on the ground.

Specifications

Sensor: Single-float assembly on vertical guide rods.

Transducer: 5K-ohm

potentiometer Range: 0-8" Resolution: Inf

Resolution: Infinite
Accuracy: 1% (with clean

guide rods)

Potentiometer linearity: ±0.5% Cable: 3 conductor shielded,

 
50' provided

Weight/shipping: 7.5/10 lbs



Met One Instruments, Inc

Corporate Sales & Service: 1600 Washington Blvd., Grants Pass, OR 97526, Phone (541) 471-7111, Fax (541) 471-7116 Distribution & Service: 3206 Main Street, Suite 106, Rowlett, TX 75088, Phone (972) 412-4747, Fax (972) 412-4716 http://www.metone.com



MODEL 550502 EVAPORATION GAUGE

OPERATION MANUALDOCUMENT 550502-9800



1600 Washington Blvd. Grants Pass, Oregon 97526 Telephone 541-471-7111 Facsimile 541-471-7116

Regional Sales & Service 3206 Main St., Suite 106 Rowlett, Texas 75088 Telephone 972-412-4715 Facsimile 972-412-4716

Model 550502 Evaporation Gauge Operation Manual

1.0 INTRODUCTION

1.1 Description

The Model 550502 Analog Output Evaporation Gauge was designed to accurately measure the changing water level in an evaporation pan and provide an electrical signal proportional to the water level from which the evaporation rate can be determined. Although it can be used with a wide variety of evaporation systems, it is normally used with a standard Class A, National Weather Service evaporation pan. The gauge consists of a float, pulley, and counterweight attached to a precision 1000 ohm potentiometer, all mounted in a protective enclosure.

1.2 Specifications

Gauce

Electrical Output Range Water Level Range Height Diameter Weight Cable

Connector
Float
Counterweight
Water input port
Base dimensions
Total resolution

0-9.73'' = 0-5 Vdc0-8.0'' = 0-4.11 Vdc

27-1/2" 8 "

7-1/2 lbs. #5883-x (x is length in feet) Specify

length when ordering cable.

3 pin MS-type 5" diameter

4 oz

1/m NP coupling, female

16' triangle with leveling screws 0.0382" with 8-bit converter in

datalogger

Potentiometer

Accuracy
Rotation
Resistance
Operating Temperature
Linearity
Power

1 %
Continuous
1000 ohms, standard
-50° to +125°F
0.25%
5 Vdc req

2.0 INSTALLATION


- 2.1 After carefully unpacking all components, inspect for damage that may have occurred in shipment. Do not discard any packing material until you are certain there is no damage and all items are accounted for, including accessories. In the event of damage during shipment, a claim for loss should be filed with carrier at the receiving location.
- 2.2 Remove the top cap and remove the float, chain, and counterweight which are packed in the housing for shipping.
- 2.3 The gauge is connected to the pan by using 1/2" diameter pipe. Flexible tubing is acceptable provided it is not subject to deterioration. The gauge should be placed far enough away from the pan so that it will not cast a shadow on the pan that could have an effect on the evaporation process.
- 2.4 Level gauge by placing a level on the housing in front of the gear and adjusting the leveling screws on the triangular base until the unit is level.
- 2.5 After connecting the gauge to the pan and securing all electrical connections, fill evaporation pan with 8" of water and carefully check all joints for leaks.
- 2.6 The pulley and the potentiometer housing have been marked with indicators that line up when the potentiometer is approximately at the breakpoint between zero and 1000 ohms resistance. To obtain the exact breakpoint for zeroing or base setting, use an ohmmeter across the white and red wires or use the actual readout device that will be used with the unit when in operation.
- 2.7 The float chain should be placed on the pulley so that the float rests on the top of the water (8" in the evaporation pan) when the pulley is at the breakpoint. For operation, the float chain is placed on the pulley so that a falling level of water will cause clockwise (as seen from the front of the pulley) motion in the pulley and a decrease in resistance in the potentiometer output. Refer to the assembly diagram.
- 2.8 Carefully secure housing cover into place with allen screws.

 
3.0 CPERATION

The potentiometer produces a proportional output in relation to the position of the float and can be monitored on site with a datalogger or strip chart recorder.

4.0 TROUBLESHOOTING

- 4.1 Always disconnect the reporting/recording device from power or troubleshoot immediately whenever any of the following conditions are observed: the cable has been damaged, the gauge does not appear to operate normally or exhibits a marked change in performance, the gauge has been dropped or damaged, or it moisture damage has occurred to the circuits.
- 4.2 If the gauge does not register correctly, first check the connections. Check the potentiometer with a voltmeter. Be sure the reporting/recording device has been powered-up correctly. If the reporting/recording device uses batteries for its primary source of power, check that the batteries have sufficient voltage to power the device.
- 4.3 Check the sensor cable connections both at the gauge and at the control unit. Cable shorts can cause lack of readings. If a connection is found to be lose, tighten into place and check to see if the problem has been corrected.

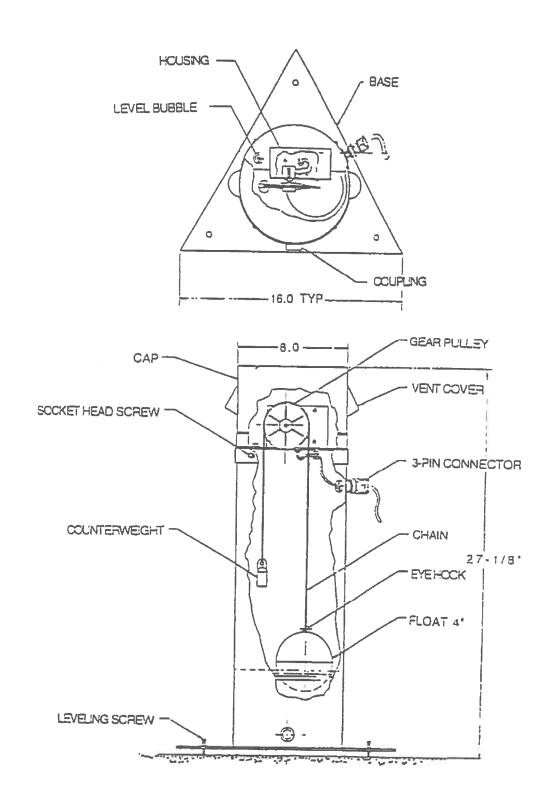





WeatherHawk Series 500 Specifications

Weather Station

Temperature Range: -40 to +122F (-40 to +50C)
Data Storage: 60 days of hourly data

I/O: Direct connection RS232

Optional Wireless RF

I/O Data Rate: 9600 baud

Wireless Frequency: Spread Spectrum 916 MHz

Battery: Integrated 2.9 AHr Lead-Acid GelCel

Charging Voltage: 16 to 22 VDC
Current Drain: 10 mA w/o heater

1.1 A with heater



Sensors

Air Temperature: Capacitive ceramic

Range -60 to +140F (-52 to +60 C)

Accuracy: +/-0.9 F @ -40 to 125 F (+-0.5 C @-40 to 52 C)

Resolution: 0.1 F (0.1 C)

Relative Humidity: Capacitive thin-film polymer

Range 0-100%

Accuracy: +/- 3% @ 0-90%RH; +/- 5% @ 90-100%RH

Resolution: 0.1%

Barometric Pressure: Capacitive Silicon

Range: 17.72-32.48 inHg (60-110 kPa)

Accuracy: .015 inHg @+32 to +86 F (+-.05 kPa @0-32 C)
Resolution: .03 inHg @-60 to +140 F (+-.1 kPa @-52 to +60 C)

Solar Radiation: Silicon pyranometer

Spectral Range 300 to 1100 nm

Reproducibility +/-2%

Output .2 mV per W/m^2 Range 0 to 1000 W/m^2

Temp. Range -40 to 130 F (-40 to +55 C)

Rain: Piezoelectric

Collecting Area 9.3 in^2 (60 cm^2)

Range 0 to 7.87 in/hr (0 to 200 mm/hr)

Accuracy: <5% (weather dependant)

Resolution .001 in (.01 mm)

Wind Direction: Ultrasonic

Azimuth: 0-360 deg

Response Time: 250 ms
Accuracy: +- 2 deg
Resolution: 1 deg
Wind Speed: Ultrasonic

Range: 0-134 mph (0-60 m/s)

Response Time: .25

Accuracy: +-.67 mph (+-0.3m/s) or +-2% which ever is greater

Resolution: .22 mph (0.1 m/s)

WeatherHawk, 185 West 1800 North, Logan, UT International: 435-750-1802 TOLL FREE USA: 866-670-5982 FAX: 435-750-1749

http://www.weatherhawk.com sales@weatherhawk.com



WeatherHawk Series 500



General Description:

The WeatherHawk Series 500 family of weather stations measure and record wind speed and direction, air temperature and relative humidity, barometric pressure, solar radiation, and rain. In addition, the system calculates and exports an evapotranspiration (ET) value that can be used by third party systems for irrigation control. They are designed for applications where a minimal visual impact, high reliability, and a long interval between routine servicing are significant factors in the decision to purchase. The standard Series 500 system incorporates an integral 3 AHr battery pack and can be interfaced with an optional solar panel for high reliability applications.

The Series 500 family is fully compatible with all versions of software, data management, input power and mounting accessories designed for the WeatherHawk Signature Series. It is also backwards compatible with all third party certified software drivers.

The Series 500 WeatherHawk systems utilize solid state sensors, with no moving parts. Solid state sensors enable a low profile design better suited to high visibility locations where a traditional weather station would be visually objectionable; they have higher reliability and a longer interval between routine service and inspection requirements; they are more robust and less susceptible to damage from wind carried debris; and they are not impaired by heavy snowfall or freezing conditions that produce rime ice (NOTE: Heated sensor versions, Models 511/521, must be used in snow or freeze zone applications).

Models 510/511

These versions of the Series 500 weather station are directly connected to a host device (PC or server) through an RS232 serial data I/O located on the bottom of the weather station. The Model 511 incorporates a thermostatically controlled heater element in the sensor head that keeps the ultrasonic wind sensor elements and the plezometric precipitation sensor surface free of snow and ice to -52° C.

Models 520/521

These versions of the Series 500 weather station are wireless to a host device (PC or server) using fully integrated industrial grade 916 MHz spread spectrum RF communications technology. They also have an RS232 serial data I/O located on the bottom of the weather station, which can be used as a second serial communications port, or for programming and testing the system, or for direct data downloads using a PC or PDA. The Model 521 also incorporates a thermostatically controlled heater element in the sensor head that keeps the ultrasonic wind sensor elements and the piezometric precipitation sensor surface free of snow and ice to –52° C. Optional configurations of both units enable replacement of the 916 MHz RF components with 922 MHz and 2.4 GHz RF components to comply with local, regional or national radio frequency licensing requirements.

WeatherHawk, 185 West 1800 North, Logan, UT
International: 435-750-1802 TOLL FREE USA: 866-670-5982 FAX: 435-750-1749
http://www.weatherhawk.com sales@weatherhawk.com

Sensor Technologies

Series 500 WeatherHawk weather stations employ the latest in weather measurement sensors. Wind speed and direction use acoustic techniques formerly available on only the most expensive professional wind velocity measurement systems. Rain is measured using an impact surface that literally counts the raindrops and measures their acoustic signature, integrating that information to provide a near real-time value for rainfall amount and rate. Barometric pressure, relative humidity, air temperature and solar radiation measurements are made by calibrated scientific grade sensors typically installed in the finest professional weather measurement and monitoring systems.

<u>Wind Speed & Direction</u> is measured by a sensor consisting of three equally spaced ultrasonic transducers in a horizontal plane. The sensor measures the bi-directional transit time along the three paths established by the transducer array. This transit time is dependent on the wind velocity across the ultrasonic path. For zero wind velocity, both the forward and reverse transit times are identical; with wind, the upwind transit time increases and the downwind time decreases. The values of any two array paths will enable computation of both wind speed and direction, and a signal processing technique enables the measurement to be calculated using the two array paths of the best quality. If the system is used in a high accuracy application a factory revalidation is recommended every five years.

<u>Rainfall</u> is measured with a stainless steel piezometric surface on top of the weather station. As individual raindrops (or hailstones) impact on the surface they each provide an acoustic signature that is measured and processed in real-time to give a value for their volume. The volume is then processed with respect to time to provide a rainfall rate. This measurement technique eliminates all of the traditional problems with tipping bucket type rainfall measurement devices, including worn or damaged bearings, clogged funnels and drip orifices, and damage from wind blown debris.

Air temperature and relative humidity (RH) sensors are combined in an integrated, user replaceable unit that requires no calibration. The RH sensor is a thin polymer, capacitive type sensor that degrades with exposure due to age and airborne contaminates. It should be user replaced every three years to maintain accuracy, and at a shorter interval if the location is subject to high levels of air pollution or is subject to airborne chemical spraying. The air temperature sensor is a capacitive ceramic sensor that is typically not subject to environmental degradation.

<u>Barometric pressure</u> is measured with a capacitive silicon temperature corrected strain gauge device that is typically not degraded by environmental exposure and does not require calibration after manufacture.

<u>Solar Radiation</u> is measured by a silicon pyranometer with a cut filter limiting the spectral exposure to the 300-1100 nm wavelength. This device typically degrades at a rate of 2% of the full scale value each year and should be recalibrated, or replaced every 3-5 years, depending on the application.

Data Transfer Protocols, Software and Data Interface HardwareAll WeatherHawk systems communicate using a proprietary Pakbus protocol. Any qualified software developer may request a software development kit, at no charge, to assist in the development of software drivers for third party devices or software.

Software

WeatherHawk offers the following software applications for weather station management, data acquisition and logging, report generation and data display.

- Visual Weather Station a single host, multi-site professional application that will communicate with any WeatherHawk weather station, as well as CR200 Series data loggers from Campbell Scientific, Inc. Visual Weather Station adapts to any data telemetry scheme including direct connection, wireless short haul RF (spread spectrum radio), wireless long-haul RF (VHF/UHF radio), satellite modem, IP modem/server module, or landline and cellular modems. The application also offers a variety of standard and user defined reports and export file formats, and it will support the generation, export and update of a weather data GUI for a website. This application runs on PC-XP computers.
- WeatherHawk-XP/X a single host, single site consumer application that will communicate with any WeatherHawk weather station. WeatherHawk-XP/X connects using a directly to the serial port on the WeatherHawk, or by wireless short haul RF (spread spectrum radio), or IP modem/server module, or landline and cellular modems. The application also offers a three export file formats, and it will support the generation, export and update of a weather data GUI for a website. This application runs on PC-XP and Macintosh OS-X computers. This software application will also interface with the NOAA/NWS CAMEO application for First Responder applications requiring plume modeling.
- Virtual Weather Station a single host, single site consumer application that will communicate with any WeatherHawk weather station. Virtual Weather Station connects directly through the serial port on the WeatherHawk, or by wireless short haul RF (spread spectrum radio). The application also offers a two export file formats, and it will support the generation, export and update of a weather data GUI for a website. This application runs on IBM compatible computers.
- LoggerNet a single host, multi-site professional application that will communicate with any WeatherHawk weather station, as well as any data loggers from Campbell Scientific, Inc. LoggerNet adapts to any data telemetry scheme including direct connection, wireless short haul RF (spread spectrum radio), wireless long-haul RF (VHF/UHF radio), satellite modem, IP modem/server module, or landline and cellular modems. The application also offers a variety of standard and user defined reports and export file formats, and with the RTMC module it will support the generation, export and update of a weather data GUI for a website. This application runs on IBM compatible computers.
- PConnect a single host, single site professional application that will communicate with any WeatherHawk weather station, as well as a range of Campbell Scientific data loggers. PConnect is used for direct download and storage of data through the serial port on either the weather station or its companion RF4xx receiver (if wireless). The software is typically utilized for field data acquisition with later export to a PC for post-processing, display and long-term archiving. It also enables on-site reprogramming of the weather station by uploading pre-configured program files. It is not designed for long haul or automated data collection protocols. This application runs on a range of PDA devices, check with Campbell Scientific, or WeatherHawk for a list of compatible units.

Weather Display – a single host, single site consumer application that will communicate with any WeatherHawk weather station. Weather Display connects directly through to the serial port on the WeatherHawk, or by wireless short haul RF (spread spectrum), or IP modem/server module. The application also offers a range of export file formats, and it will support the generation, export and update of a weather data GUI for a website. This application runs on PC-XP computers.

Data Interface Hardware

<u>Weatherproof serial cables</u> are available in 25, 50 and 75 foot lengths for permanent direct connection to the RS232 I/O on any WeatherHawk weather station. These cables feature nickel plated brass DB-9 connectors for corrosion resistance and have a Sanoprene jacket which is suitable for both high UV and direct burial environments.

An <u>RF4xx spread spectrum RF transceiver</u> is supplied as standard equipment with every wireless WeatherHawk weather station. The unit comes with an AC power supply (120 VAC/60 Hz), a 6 foot serial cable and an antenna. Additional RF4xx kits can be purchased for simultaneous communication with any WeatherHawk wireless weather station, enabling multiple host computers to use the data from a single weather station. Typical applications for multiple receiver units are in home automation where a single weather station may support a whole house control unit, with touch panel data display units; and a discrete PC, which may act as the server for a local intranet or internet weather data display website.

<u>WeatherHawk IP server</u> modules are a proprietary web server that is designed to interface the serial output of any WeatherHawk weather station, or companion RF4xx transceiver with an Ethernet. Output formats from the IP server module are HTML, XML and CSV (with headers).

Mounting Systems

All WeatherHawk weather stations will interface with the full range of mounting systems supplied by WeatherHawk. They consist of:

<u>TP-1 Tripod</u> – The tripod, with its range of accessories is the most rugged and adaptive weather station mounting system. It supports both rooftop (sloped and flat) and ground mounts, with mast heights to 10 feet. Accessories consist of a weather station alignment kit (optional), ground stakes (optional), a rooftop sealing kit (standard), grounding rod kit (optional), mast length extensions (optional), and a guy-wire kit (optional).

<u>HM Series</u> – The HM Series house mount kits are adapted satellite dish mounts that will support attachment to sloped and flat roofs, and to the vertical facia and reinforced trim boards around the roofline of a home. The accessories consist of mast extensions, a Retro-deck base assembly that offers additional stability and support on composite roof coverings; and a Comm-deck mount that offers a weatherproof penetration through a roof for a directly connected weather station.

Various additional specialized mounting tripods are available for high environmental abuse environments, or quick deployment temporary applications.